


Etac Cross 5

Manual english




75190M 2015-08-24

Etac Cross 5

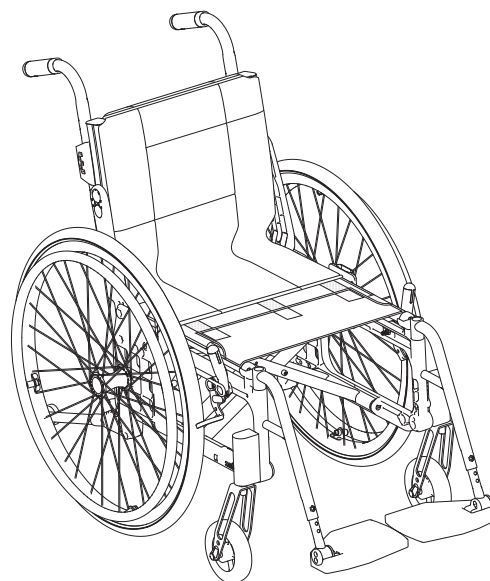

Etac Cross 5 XL

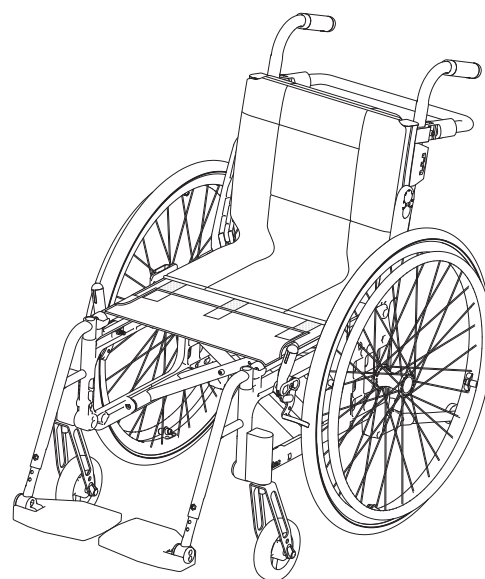

Contents

1. General – introduction		6. Settings backrest 3A	
Intended use.....	3	Adjusting backrest angle, mono- bi- and triangular back ..	31
2. Description		Adjusting backrest height, monoangular back.....	32
.....	4	Adjusting backrest height and lumbar angle, biangular back	33
3. The chairs possibilities		Adjusting backrest height and lumbar angle, triangular back	34
.....	5-7	Adjusting seat depth using lumbar angle, triangular back ..	35
4. Accessories		Fitting seat extender	35
.....	8-10	7. Settings backrest mod. 2.....	36
5. Settings		8. Readjustments	
Front seat height.....	11	Brake, adjustment.....	37
Adjusting the front seat height by using the front fork attachment.....	11	Adjusting the brake block	38
Adjusting the front seat height by changing the position of the castor wheel	11	Continuously angle-adjustable legrest (option)	38
Adjusting the front seat height by changing the castor wheel/front fork.....	12	Amputee legrest (option)	38
Front seat height table	12	Anti-tips.....	39
Mounting the front fork	13	Changing the camber angle.....	40
Setting the angle of the front fork attachment.....	13	Adjusting the centre of balance	40
		Handrims	41
		Adjusting the distance of the handrim	41
		9. Accessories - adjusting, handling	
Rear seat height.....	14	Seat cushion and comfort wedge.....	42
Adjusting rear seat height by changing rear wheel position or rear wheel size.....	14-15	Armrest, detachable, height adjustable	42
Rear seat height table	16	Armrest, flip-up, height adjustable	43
Drum brake	17	Positioning belt	43
Seat angle.....	18	Headrest	44
Seat depth	18	10. Technical data	
Seat comfort.....	18	Etac Cross 5, Etac Cross 5 XL	45
User manual		11. Service and maintenance	
.....	19-30	Upholstery	46
Symbols and warnings	20	Rear wheel/castor wheel, front fork attachment	46
Transportation in vehicles	21	Brakes	46
Handling.....	22-23	Washing the frame	46
Settings seat comfort.....	24-25	Miscellaneous	46
Driving technique, maneuvering.....	26-29	12. Tests and Guarantees	47
Maintenance & Fault-finding chart.....	30		

1. General

Thank you for choosing a wheelchair from Etac. The manual must be read thoroughly to avoid damage when handling and using the chair. In this manual the User is the person sitting in the chair. The Care giver is the person helping the user.



This symbol appears in the manual together with text. It highlights actions where the wheelchair's, the user's or the care giver's safety can be put at risk.




This symbol appears in the manual together with text. Here you will find advice and tips worth considering.

Explanation for list of points

- Applies to model
- ⊕ Standard for this model

In the centre spread of this manual you will find a removable section that contains user information.

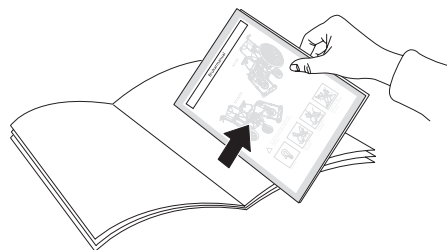

Tools



Allen key
3, 4, 5, 6 mm



Socket spanner
8, 10, 13, 24 mm



Socket wrench
19 mm



Screw driver
PH1

Intended use:

Etac Cross 5 and Etac Cross 5 XL are manual, cross-folded, all-round wheelchairs with multiple functions and they are intended for use both outdoors and indoors. Their seats are adjustable in height, angle and depth. The backrests are adjustable in height, angle and contour. The footrests are adjustable in height, angle and depth.

Etac Cross 5 and Etac Cross 5 XL can be supplemented and adjusted if need change. A large range of options and accessories are available: Various types of backrest and legrest, fixing points for transport in mobility service buses, antitips, various types of handrims and brakes etc.


Etac Cross 5 and Etac Cross 5 XL have the best prerequisites to create comfort, functionality and good manoeuvrability.

Etac regularly improves its products. We therefore reserve the right to modify the products without prior notice. The dimensions given on drawings or other material are solely for guidance.

We recommend that the wheelchair is adapted individually to the user before it is put into use.

We are not responsible for printing errors or incomplete information.

2. Description

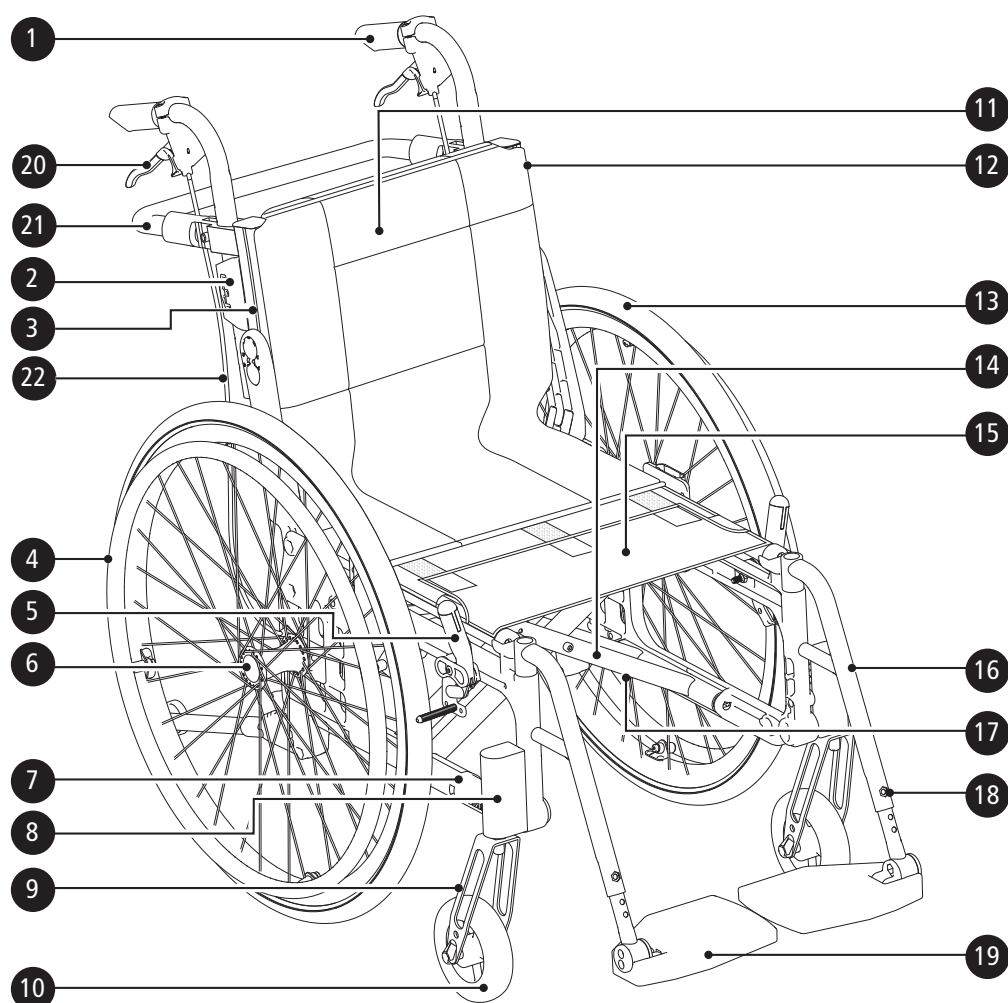

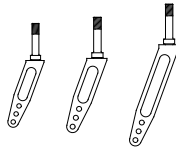

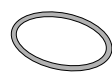
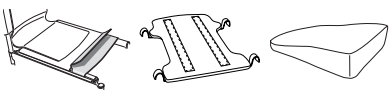
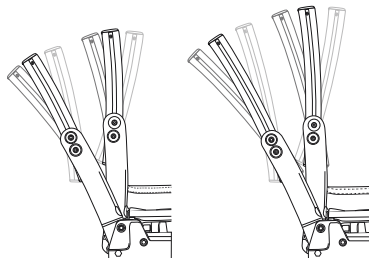


- | | |
|-------------------------------|------------------------------|
| 1. Push handles | 12. Backrest upholstery |
| 2. Locking knob, push handles | 13. Rear wheel |
| 3. Back rail | 14. Cross frame |
| 4. Handrim | 15. Seat upholstery |
| 5. User brake | 16. Legrest |
| 6. Quick release hub | 17. Serial number |
| 7. Side frame | 18. Locking knob, footrest |
| 8. Front fork attachment | 19. Footrest |
| 9. Front fork | 20. Brake handle, drum brake |
| 10. Castor wheel | 21. Cross brace |
| 11. Backrest cover | 22. Brake wire, drum brake |



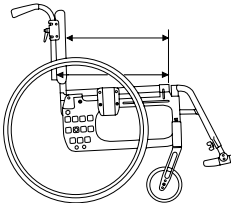
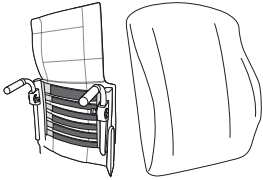
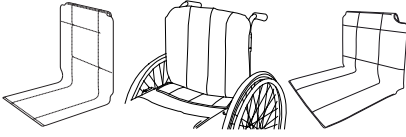
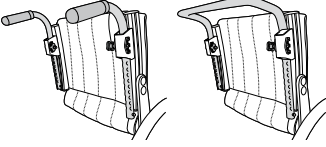
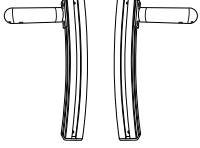
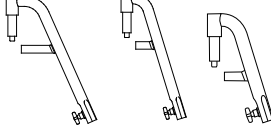
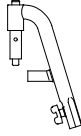
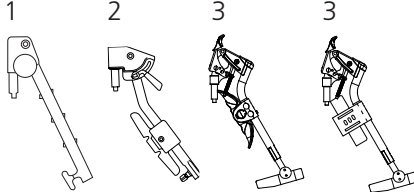
3. The chair's possibilities

In the section "The chair's possibilities" you can see all the adaptations possible on the wheelchair. Variations may occur in different markets, e.g. as regards backrest models. For more information, see www.etac.com or contact our customer service.











More so called "odd combinations" are available, for example rear wheels and castor wheels. Please, contact our customer service for more information.

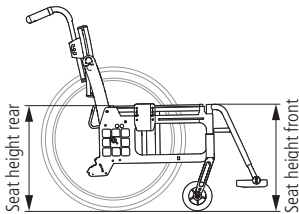				Cross 5	Cross 5 XL
Seat height		Front	34-53 cm	●	
			34-53 cm		●
		Rear	34-56,5 cm	●	●
Seat angle		Max forward angle: 2 cm lower front than back (3°) Max backward angle: 6 cm higher front than back (9°)		●	●
Castor wheel		4" massive (max user weight 100 kg)		●	●
		5" massive (with Cross 5 XL max user weight 135 kg)		●	●
		6" semipneumatic		●	●
		6,5" massive		●	●
		8" semipneumatic		●	●
Front fork		Extra short (two alternative wheel height positions)		●	●
		Short (three alternative wheel height positions)		●	●
		Medium (three alternative wheel height positions)		●	●
		Long			
Rear wheel		20"		●	●
		22"		●	●
		24"		●	●
		24" Carbon (not in combination with drum brakes)		●	
		26"			
Handrims		Aluminium		●	●
		Stainless steel		●	●
		Plastic coated		●	●
		Cellular rubber (not in combination with drum brakes)		●	●
		Titanium (not in combination with drum brakes)		●	
Camber angle		2°		●	●
		0°		●	●
Seat		Black fabric		●	●
		hard seat		●	●
		ECS: A fixed seat/backrest system with anatomically shaped cushions, detachable		●	●
Backrest 3A / Backrest 3A high			3A	3A high	●
		Height	32-45 cm	38-51 cm	
		Backrest angle	-5° - +20°	-5° - +20°	
			Lumbar angle		
		Monoangular	+7° (fixed)		
		Biangular	-2° - +13°		
		Triangular	-8° - +18°		

3. The chair's possibilities

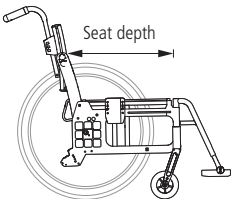				Cross 5	Cross 5 XL
Seat depth		Short frame 36-42 cm (triangular 36-49 cm)		●	●
		Long frame 42-48 cm (triangular 42-55 cm)		●	●
Backrest mod. 2		Height 30-45 cm Angle -5° - +15°	Standard	●	●
			Tapered	●	●
			Widened	●	●
Seat depth backrest mod. 2		Short frame 36-42 cm. Long frame 42-48 cm. Functional: Short frame 42-48 cm. Long frame 48-54 cm.		●	●
Backrest upholstery		Adjustable upholstery		●	●
		ECS		●	●
Backrest cover		Standard		●	●
		Comfort		●	●
		Tidy, water-repellent, wipeable		●	●
Push handles/ Bow handle		Height adjustable at intervals of 2 cm. Detachable.	Push handles	●	●
			Bow handle	●	●
Fixed push handles		Right/left fits backrest 3A		●	●
Legrests, detachable swing-away		Normal knee angle		●	●
		Narrow angle (only together with 5" castor)		●	
		Narrow angle, short		●	
Legrests lockable,		Normal knee angle		●	●
		Narrow angle		●	
		Narrow angle, short		●	
Legrests Angle adjustable		Mod 1 with or without calf support adjustable in height, depth, angle and sideways (also available with flip-up calf support).		●	●
		Mod 2 with calf support adjustable in angle, height and sideways.		●	●
		Mod 3 with foldable calf support from 40 cm seat width or with attachment and calf support.		●	●


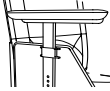

 


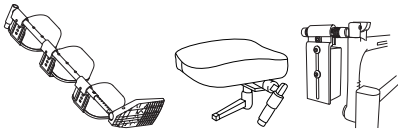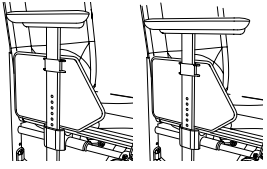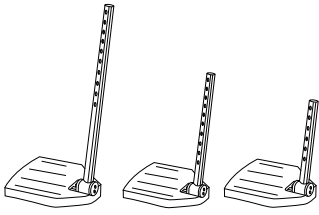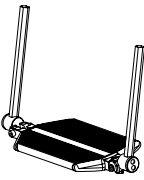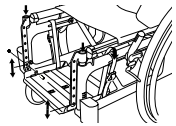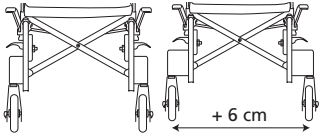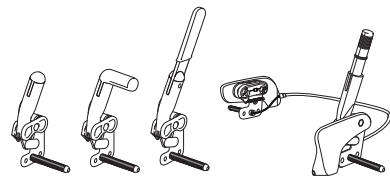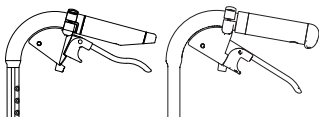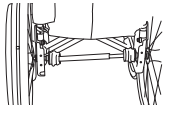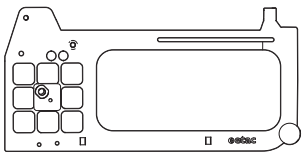
3. The chair's possibilities

			Cross 5	Cross 5 XL
Legrests other		Plaster legrest	●	●
		Amputee legrest	●	●
		Amputee weight	●	●
Armrest		Short 25 cm	●	●
		Long 35 cm	●	●
Footrest		Std Max length: 51 cm. Min length: 33 cm.	●	●
		Extended attachment tubes +10 cm	●	●
		Shorter attachment tubes -8 cm	●	
		One-piece footrest	●	●
		One-piece footrest complete for 35-37,5 seat width, adjustable in angle, settable height and depth	●	
Front fork attachment		Low widened	●	●
		Standard	●	●
		widened 6 cm	●	●
Brakes		Standard	●	●
		Angled handle	●	●
		Extended handle	●	●
		Single hand brake (standard or angled handle)	●	●
Drum brake		Brake handle 75 mm grip	●	●
		Brake handle 100 mm grip	●	●
Single hand drive		For right or left side. Telescoping axle, easy to remove when folding. (Not in combination with drum brakes)	●	●
Frame colour	01 = Black 97 = Silent purple 94 = Silk grey 98 = Midnight blue 95 = Soft green 96 = Coral 99 = Yellow		●	●
Frame active		Without anti-tip attachment. Colour: black 01	●	









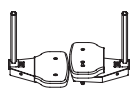
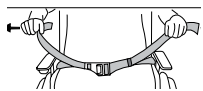
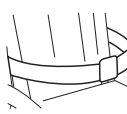
 




4. Accessories

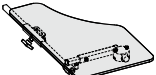Assembly instructions are always provided with accessories when they are supplied by Etac.
Instructions are also available on our website, www.etac.com






 

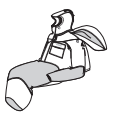


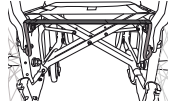
Settable = Adjusted using tools. **Adjustable** = Adjusted without tools.

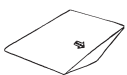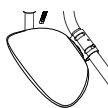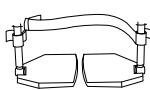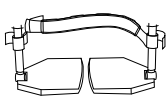			Cross 5	Cross 5 XL
Armrest	height-adjustable 25 cm long, solid top, black		●	●
Armrest	height-adjustable 38 cm long, solid top, black		●	●
Armrest cover	detachable, 25 or 38 cm long padded or gel, dark grey plush or black Dartex		●	●
Armrest cushion Hemi	swing-away for mounting on long armrests		●	●
Arm support Locking Kit	A locked arm support is not detachable but its height can be adjusted freely.		●	●
Armrest foldable	height adjustable or fixed height		●	●
Side guard	black		●	●
Mudguard	right and left		●	●
Thigh support			●	●
Thigh support	With soft cushion		●	●
Widening kit	to extend handrims, brake and armrests 5 mm on each side		●	●
Tray	transparent, fits onto long armrest		●	●
Hemi tray	transparent, width 35-50 cm. Can be fitted onto short or long armrests.		●	
Anti-slip device	for the Hemi tray		●	
Tray Hemi/Communication	tip up right/left		●	●

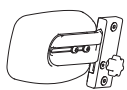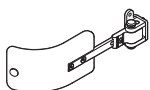4. Accessories

			Cross 5	Cross 5 XL
Seat extension	To be used together with triangular back		●	●
Seat cushion	dark grey plush and black velour, 56 cm, cut according to seat depth set, washable		●	●
Seat cushion Tidy	water-repellent, wipeable		●	●
Comfort wedge	for the cushion, evens out the front part of the seat		●	●
Cover for calf support	on angle adjustable legrest model 3, black Dartex		●	●
Calf strap	detachable, black nylon, adjustable in length		●	●
Padding	for calf strap		●	●
Heel straps	black nylon, adjustable length		●	●
Extended footrest	fits onto the existing footrest, from seat width 40-55 cm		●	●
Positioning belt	two pieces, with snap-lock, fixing points on the wheel-chair frame		●	●
Seat belt	with snap lock		●	●
Headrest	mounted on bow handle, adjustable in height, depth and angle. Available in several models		●	●
Cross brace	with snap lock		●	✱
Back wedge	length 15 and 30 cm, attached with Velcro		●	●
Trunk support	Cross back 3A, PUR or Dartex		●	●
Trunk support	Cross back 3A, swing-aside, medium or large cushion		●	●

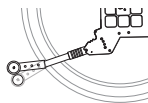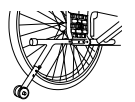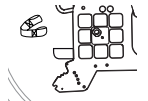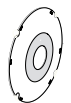4. Accessories

			Cross 5	Cross 5 XL
Anti-tips	telescopic, foldable, settable height, adjustable length and angle		●	●
Anti-tips	Frame active		●	
Cane holder	two parts, one of which is an elasticated section that is fastened around the cane		●	●
Spoke guard	with grey or yellow print		●	●
Tetra quickrelease adapter	for persons with reduced hand function		●	●
Tool kit			●	●
Bags			●	●
Rain cape Proof	Information is available at www.etac.com		●	●
Weather protector Proof	Information is available at www.etac.com		●	●
Leg warmer Proof	Information is available at www.etac.com		●	●
Gloves	Information is available at www.etac.com		●	●

5. Settings

Cross 5

Cross 5 XL

Front seat height

The front seat height may be adjusted by:

- Using the front fork attachment, adjustable in height and angle.
- Changing the position of the castor wheel.
- Changing the front fork.
- Changing the castor



Risk of tipping: Always check the setting of the anti-tips.




Adjusting the front seat height by using the front fork attachment

Loosen the screws (A and B). Adjust according to position marking (C) to obtain equal height on both sides.

Check and adjust the angle of the attachment and tighten the screws (see section "Setting the angle of the front fork attachment")



Risk of tipping: Always check the setting of the anti-tips.

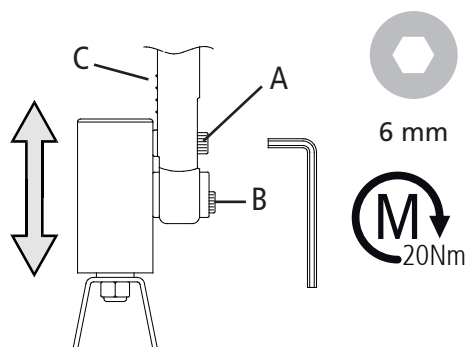


Adjusting the front seat height by changing the position of the castor wheel

See also section "Front seat height table".



Risk of tipping: Always check the setting of the anti-tips.

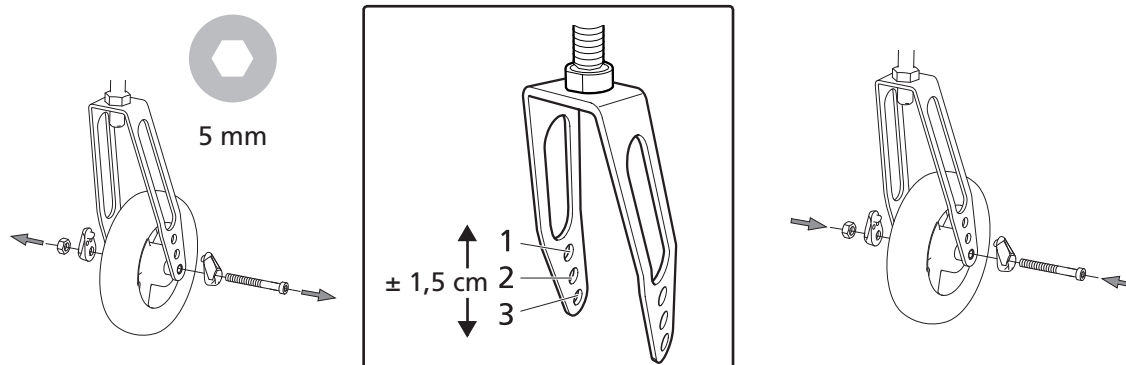

5. Settings

Adjusting the front seat height by changing the castor wheel/front fork

See sections "Adjusting the front seat height by changing the position of the castor wheel" and "Front seat height table".



5 mm




19 mm



Risk of tipping: Always check the setting of the the anti-tips.

Front seat height table
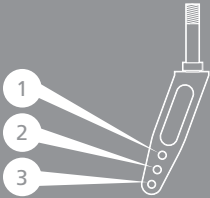
<div><div>G</div><div>F</div><div>E</div><div>D</div><div>C</div><div>B</div><div>A</div><div>6</div><div>5</div><div>4</div><div>3</div><div>2</div><div>1</div></div>			<div></div> <div>Castor wheel position (cm)</div> <table><thead><tr><th colspan="3">Front fork extra short</th><th colspan="3">Front fork short</th><th colspan="3">Front fork medium</th><th colspan="3">Front fork long</th></tr><tr><th>1</th><th>2</th><th>3</th><th>1</th><th>2</th><th>3</th><th>1</th><th>2</th><th>3</th><th>1</th><th>2</th><th>3</th></tr></thead></table>												Front fork extra short			Front fork short			Front fork medium			Front fork long			1	2	3	1	2	3	1	2	3	1	2	3		
Front fork extra short			Front fork short			Front fork medium			Front fork long																															
1	2	3	1	2	3	1	2	3	1	2	3																													
Low front fork attachment	G	4" *	-	34-38	35,5-39,5	-	-	-	-	-	-	-	-	-	●	●																								
	A-F	5" ***	-	-	-	36-40	37,5-41,5	39-43	-	-	-	-	-	-	●	●																								
Std front fork attachment		A-F	6½"	-	-	-	-	-	41-45	-	-	-	-	-	-	●	●																							
	5" ***		-	-	-	37,5-41,5	39-43	40,5-44,5	43-46	45-48	46-49	-	-	-	●	●																								
	6"		-	-	-	-	40-44	41,5-45,5	45-47	46-49	47-50	-	-	-	●	●																								
	A-C	6½"	-	-	-	-	41-45	42,5-46,5	46-48	47-49	48-51	50,5-52,5	51,5-53,5	52,5-55,5	●	●																								
	A-C	8" **	-	-	-	-	-	-	-	48-51	49-52	-	52,5-54,5	53,5-56,5	●	●																								

* Maximum user weight 100 kg

For correct setting of the front fork attachment: Max. backward inclination 6 cm higher front than rear (9°), max. forward inclination 2 cm lower front than rear (3°).


** Possible in balance position 4-6 with 3° backward inclination and Std leg support. Make sure the fork/castor wheel can rotate freely without hitting the wheelchair or user. For 8x2" castor wheels, use the Transit fork (gives a seat height of 47-51 cm).

*** With Cross 5 XL max user weight 135 kg.

5. Settings

Mounting front fork

- Pull out the cover plug (A) and unscrew the retaining nut (B). Pull out the front fork and put the bevelled washer (C) and the bearing on the new fork.
- Mount the washers and bearings in the front fork attachment as illustrated. Washer (C) is mounted with the bevelled side towards the front fork. Washer (D) on top under the retaining nut.
- Tighten the retaining nut until it cannot be turned any more. Loosen it 1/2-1 turn. The spring washer then has the correct tension. It reduces the risk of the castor starting to "wobble".
- Mount the cover plug.

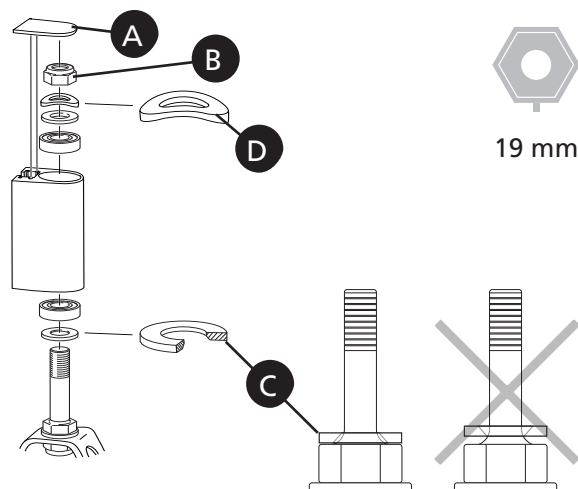

Setting the angle of the front fork attachment

The correct angle setting is important for the wheelchair's manoeuvrability.

Unscrew the lower attachment screw (A) about 2 turns so that the shaft (C) moves freely inside the sleeve.

Insert the Allen key in the hole (B) and turn until the attachment is 90° to the floor. Always start from a




position that enables the wheel to move forward in the rotation (D). Hold the shaft in place while the lower attachment screw is tightened.



Risk of tipping: Always check the setting of the anti-tips.



Keep your eye on something vertical, e.g. a door frame or table leg, while setting the angle.

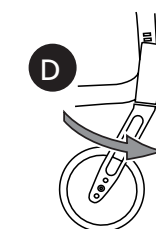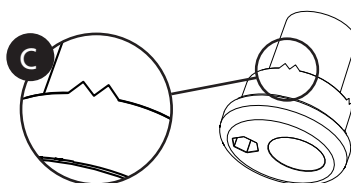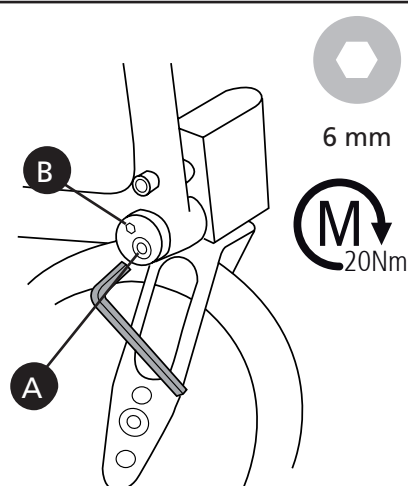


5. Settings

Rear seat height

Rear seat height can be adjusted by:

- Changing the position of the rear wheel in the frame.
- Changing the position of the rear wheel in the camber washer.
- Changing the rear wheel.

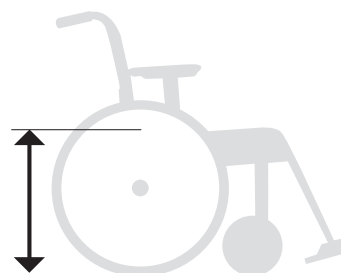






Risk of tipping: Always check the setting of the the anti-tips.

Adjusting rear seat height by changing rear wheel position or rear wheel size

1. Remove the rear wheel.
2. Unscrew the nut.
3. Reassemble in desired position (see table in section "Rear seat height table").



Risk of tipping: Always check the setting of the the anti-tips.

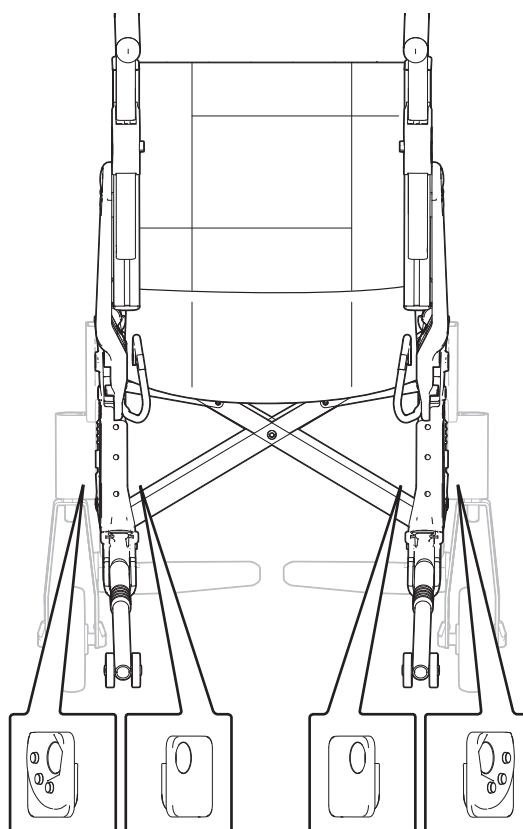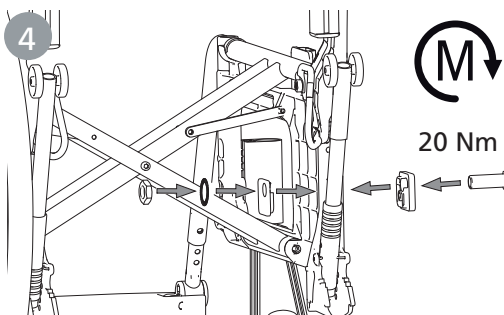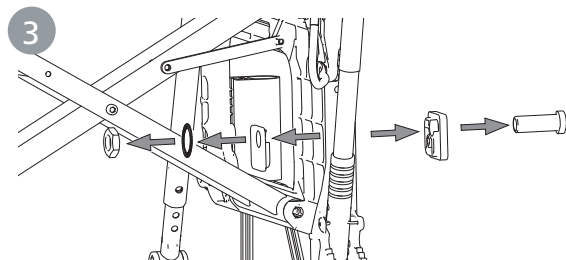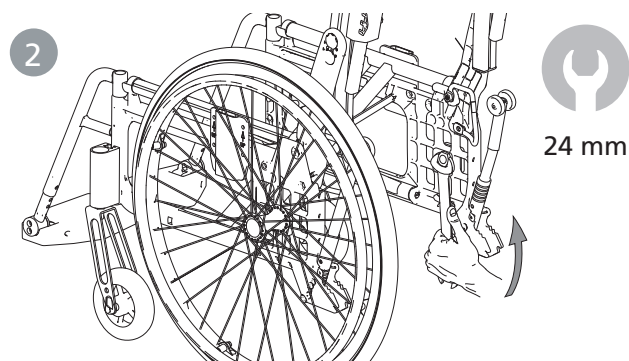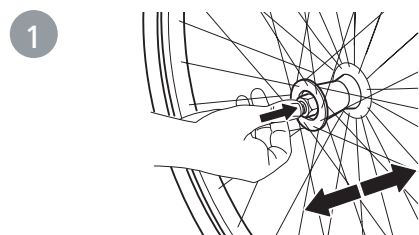


5. Settings





Cross 5
Cross 5 XL




When assembling, check so that the rear wheel axle is correctly adjusted. The button in the hub must pop out to the original position.

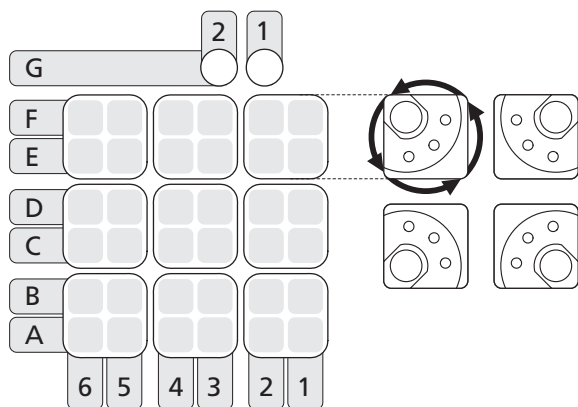

Assembly in pos. G1 & G2

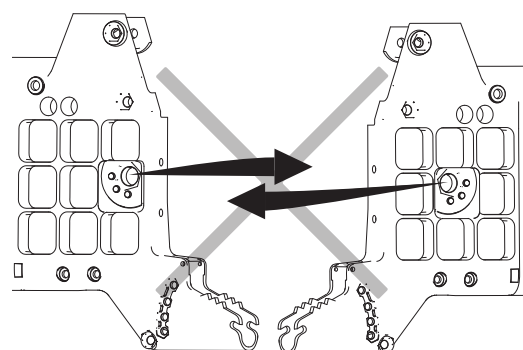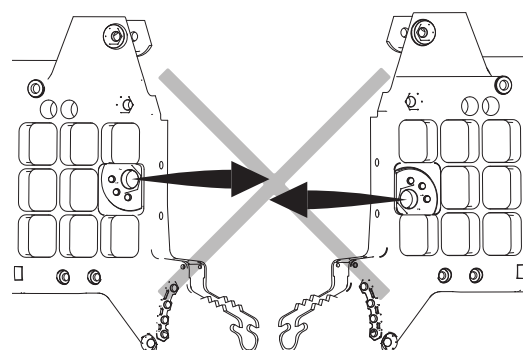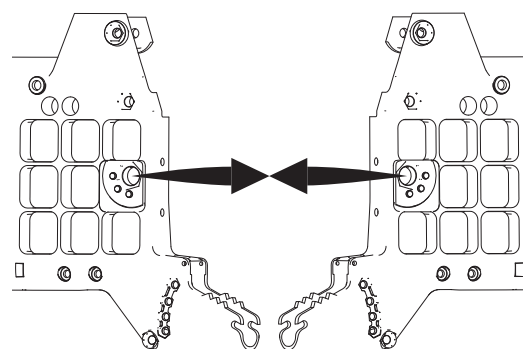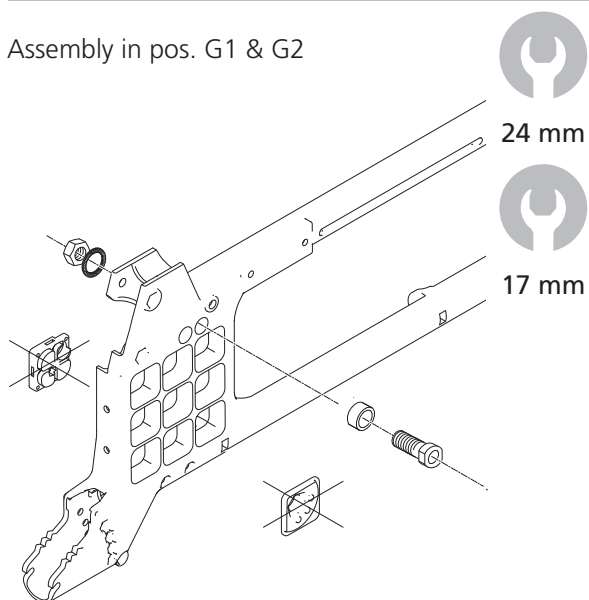


Assembly 0° Camber

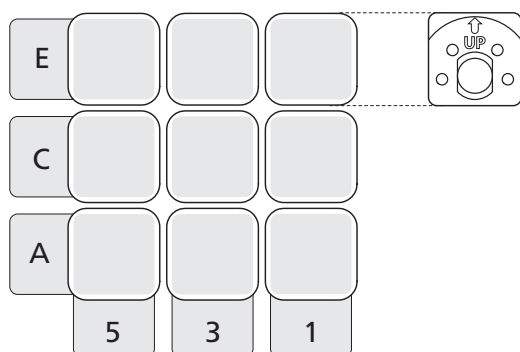


5. Settings

Rear seat height table


Rear wheel position, height

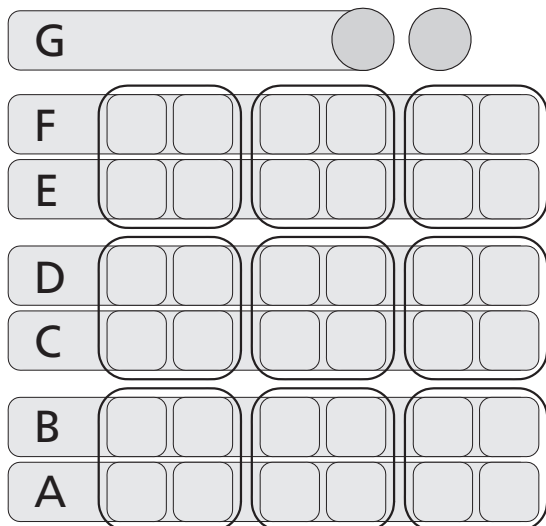


Seat height, rear

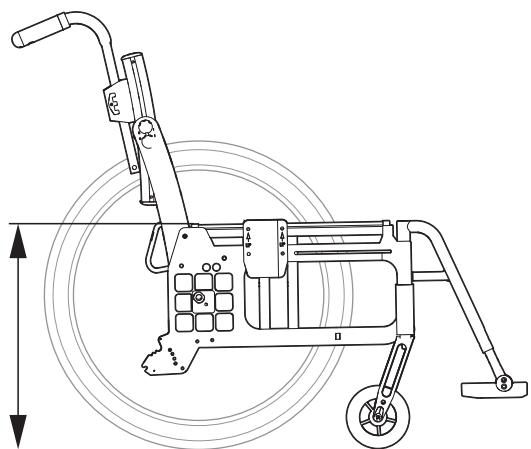

Distance wheel-seat

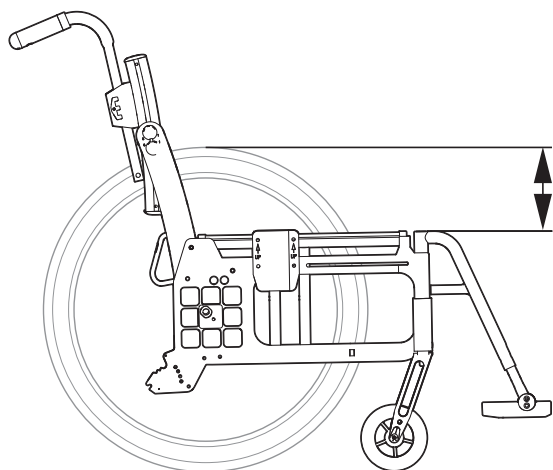









		Wheel	Seat hgt	Distance	Cross 5	Cross 5 XL
Position A		20"	46 cm	4,5 cm	●	●
		22"	48,5 cm	7,0 cm	●	●
		24"	51 cm	9,5 cm	●	●
		26"	53 cm	12 cm	●	●
Position B		20"	44 cm	6,5 cm	●	●
		22"	46,5 cm	9,0 cm	●	●
		24"	49 cm	11,5 cm	●	●
		26"	51 cm	14 cm	●	●
Position C		20"	42 cm	8,5 cm	●	●
		22"	44,5 cm	11,0 cm	●	●
		24"	47 cm	13,5 cm	●	●
		26"	49 cm	16 cm	●	●
Position D		20"	40 cm	10,5 cm	●	●
		22"	42,5 cm	13,0 cm	●	●
		24"	45 cm	15,5 cm	●	●
		26"	47 cm	18 cm	●	●
Position E		20"	38 cm	12,5 cm	●	●
		22"	40,5 cm	15,0 cm	●	●
		24"	43 cm	17,5 cm	●	●
		26"	45 cm	20 cm	●	●
Position F		20"	36 cm	14,5 cm	●	●
		22"	38,5 cm	17,0 cm	●	●
		24"	41 cm	19,5 cm	●	●
		26"	43 cm	22 cm	●	●
Position G		20"	34 cm	16,5 cm	●	●
		22"	36,5 cm	19,0 cm	●	●
		24"	39 cm	21,5 cm	●	●
		26"	-	-		

5. Settings


Cross 5

Cross 5 XL

Drum brake

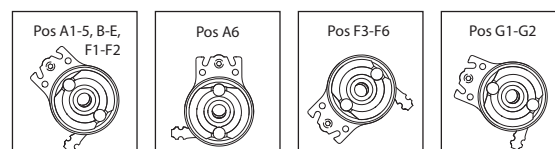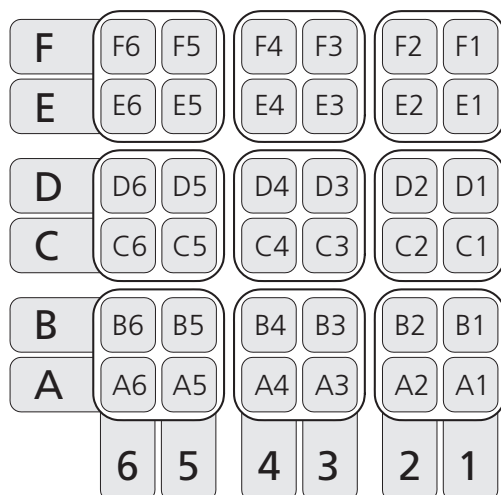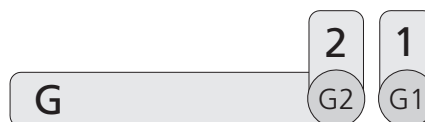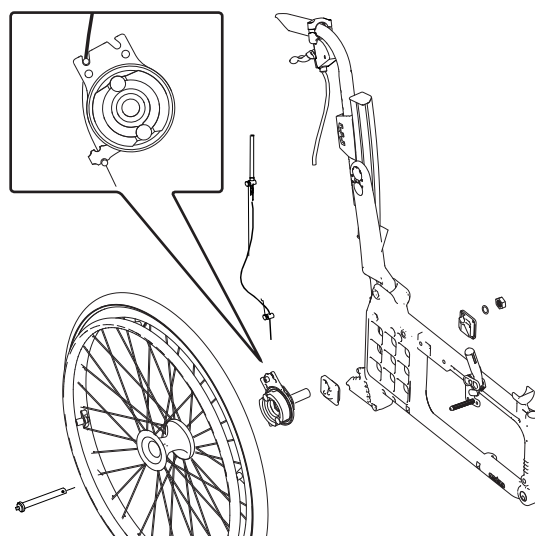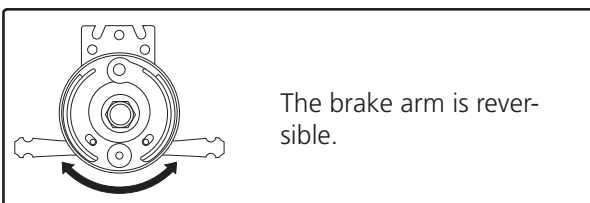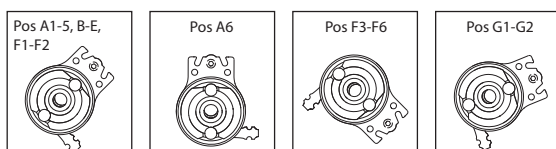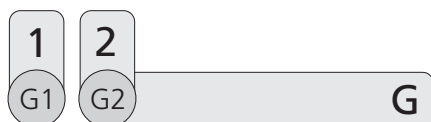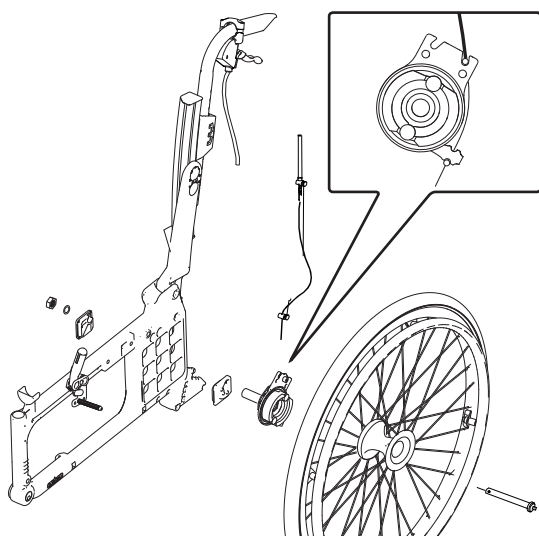

Assembly pos. G1 and G2

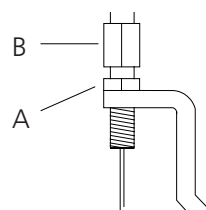

8 mm

To adjust the brakes, loosen nut (A). Loosen/tighten screw (B) in order to reach proper brake function. Tighten the nut (A). This adjustment should be done when the brakes are not working properly.

5. Settings

Seat angle


The seat angle is dependent on the difference between the front and the rear seat heights.



Risk of tipping: Always check the setting of the the anti-tips.

If the seat angle is changed:

- Adjust the angle of the front fork attachment.
- Check the backrest angle.

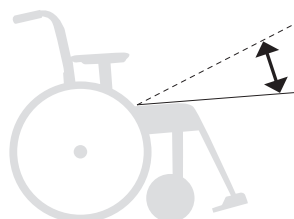


Seat depth

The **seat depth** can be adjusted by lifting the front seat upholstery and sliding it backwards or forwards.

With Cross backrest 3A triangular, the seat depth can be further adjusted by means of the lumbar angle (see the section "*Adjusting seat depth using lumbar angle, triangular back*").



Risk of tipping: Always check the setting of the the anti-tips.

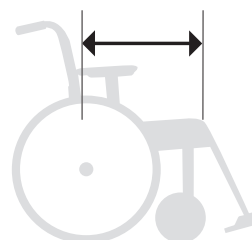

Seat comfort


After adjusting seat height, seat angle, seat depth and backrest angle, the backrest upholstery must be adjusted to optimize the seat comfort. See the “*Settings seat comfort*” section in the User manual.

User manual


75190L 2015-03-09




This part of the manual (User manual) should be torn out and at all times follow the wheelchair. This as it contains important user information.

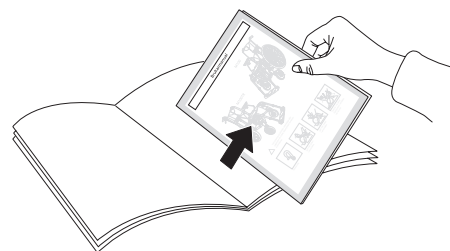

Etac Cross 5

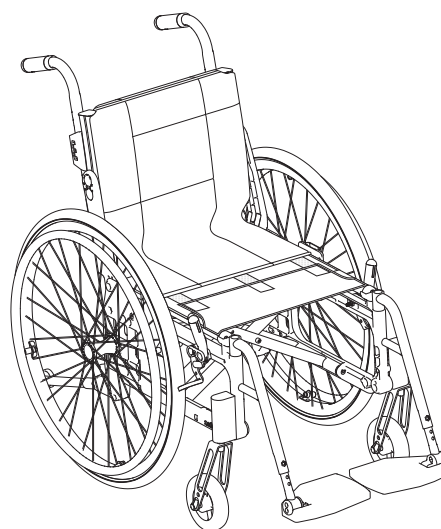

Etac Cross 5 XL

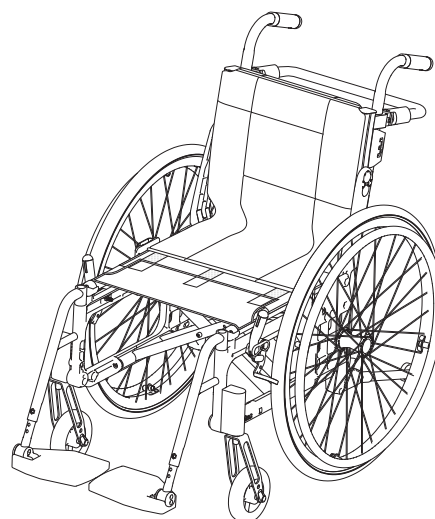


User manual

Contents


User manual	
Symbols and warnings.....	20
Transportation in vehicles.....	21
Handling.....	22-23
Settings seat comfort	
Backrest cover	24
Seat cushion.....	24
Backrest upholstery.....	24
Backrest angle	24
Footrests.....	25
Calf/heel strap	25
Armrests.....	25
Driving technique, maneuvering.....	26-29
Maintenance & Fault-finding chart.....	30

Symbols and warnings


These symbols appear on labels and in the user manual.

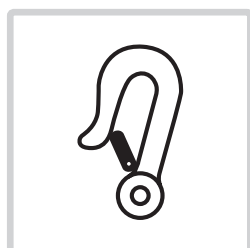


Securing

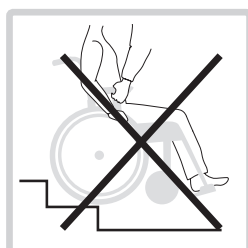


Do not lift the chair
by the armrests

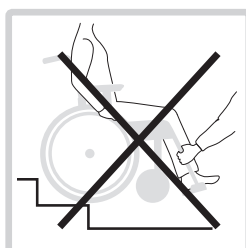

Do not lift the chair
by the legrests

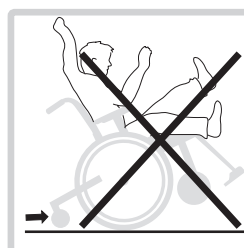


Risk of tipping:
Always have the anti-
tips down when in
motion

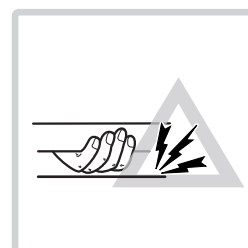


Pinch point hazard

General warnings


The following should be taken into account in any use of the product.

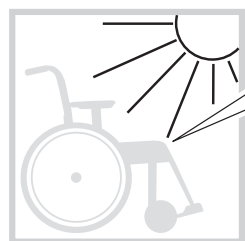

Bright sunlight can
heat up parts of the
wheelchair and cause
burns

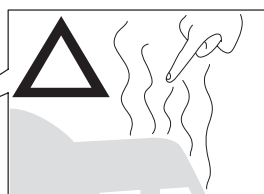

Do not lift the chair
by the legrests

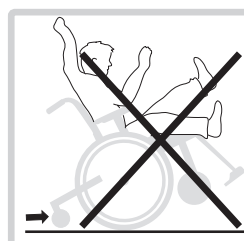

Risk of tipping:
Always have the anti-
tips down when in
motion



After adjusting seat height, centre of balance, backrest angle or backrest upholstery, the anti-tips function must always be checked.

User manual

Transportation in vehicles


Etac's wheelchairs are tested in accordance with ISO 7176-19 (see "Tests and guarantees" section in the manual).

Etac recommends in the following order:

- 1) The user transfers to a seat in the vehicle and uses the vehicle's 3-point belt while travelling. The wheelchair is then placed in the boot or safely in the back seat so that it cannot overturn or roll.



- If possible, the wheelchair should be placed in the boot.
- If the wheelchair is placed in the back seat, make sure it can not overturn or roll. If possible secure the wheelchair with the car's safety belt.

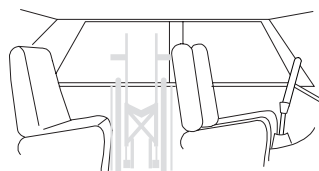

- 2) The wheelchair is secured facing forwards in the vehicle as per this manual, the user uses a separate 3-point belt that is secured in the vehicle. This is the way in which the wheelchair is tested and approved.






Securing

- Securement points rear must be used.
- Restraining device must not be put through the wheels or around the back tubes.



- The parking brake must be used.
- The anti-tips must be lowered.
- Accessories/parts that can be removed without tools, shall be removed and secured.
- A correctly adjusted headrest shall be used.
- The backrest shall be level with or above the user's shoulders.
- Cross brace must be used.
- Rear wheels must have handrims.

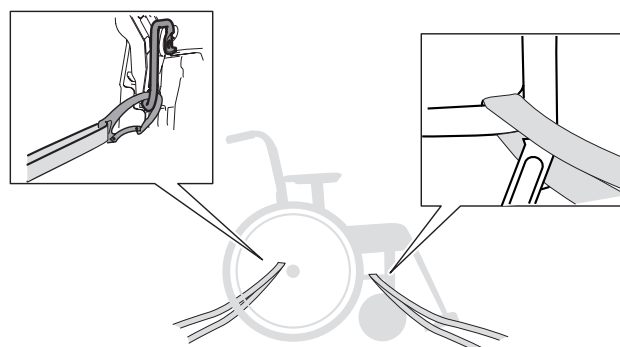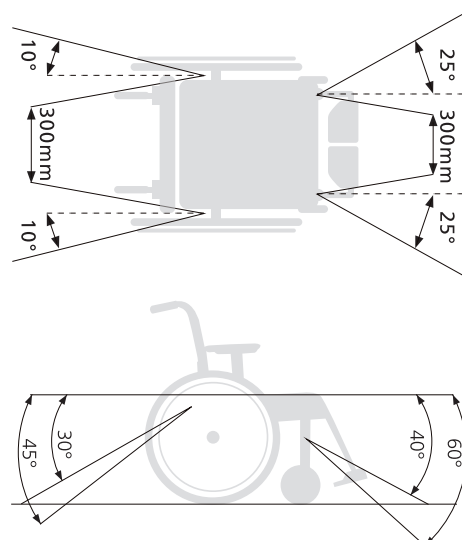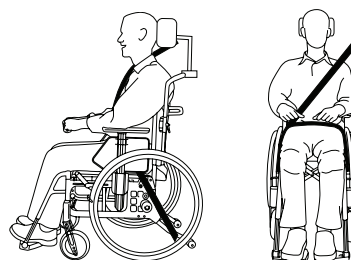

- 3) According to directive 2001/85/EC, appendix VII, point 3.8.3. there are specially marked wheelchair locations in vehicles that permit transport with a wheelchair facing in the opposite direction of travel. If this means of travel is used, the user/carer must be aware while travelling, prepared for sudden movements and have the capacity to maintain a safe sitting position throughout the entire journey. The user's disabilities must not be of such an extent that he/she is not able to hold onto the handles fitted in the vehicle when there are changes of speed or direction.



- The parking brake must be used.
- The anti-tips must be lowered.
- Accessories/parts that can be removed without tools, shall be removed and secured.
- A correctly adjusted headrest shall be used.
- The backrest shall be level with or above the user's shoulders.
- Positioning belt must be used.


User manual

Handling




Unfolding

- Push down on one side of the seat frame, using the whole of the flat of the hand.
- Do not hold the seat frame tube while unfolding as there is a risk of pinching your fingers.
- Lower the footrests.

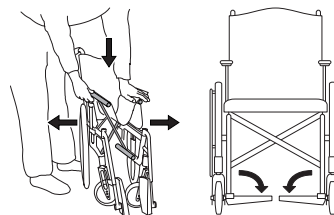

Folding


- If a bow handle and/or cross brace is mounted they should be removed.
- Flip up the footrests.
- Lift up the seat.

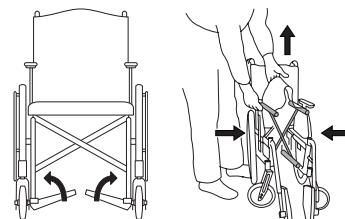

Rear wheel with quick release




When assembling, always check so that the quick release button pops out to the original position.

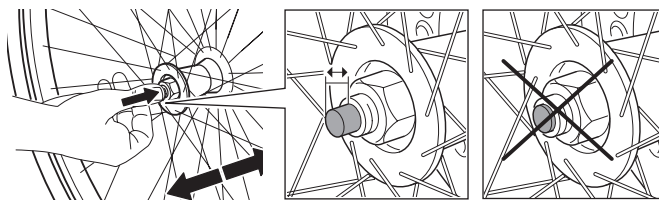


Anti-tips


- The anti-tips can be flipped up.

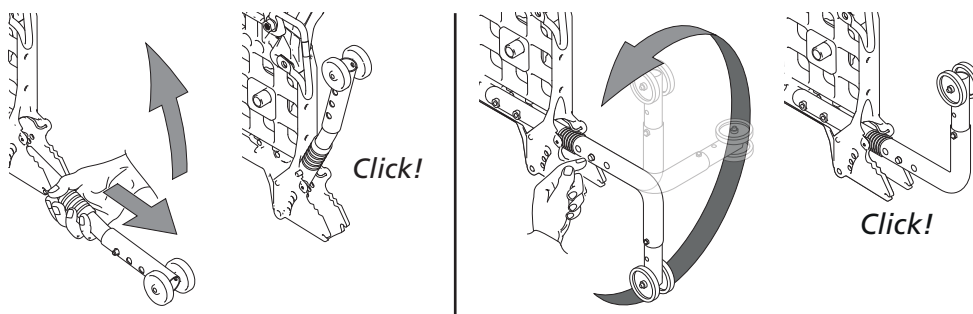

- Ensure the locking function works properly when activating the anti-tip.

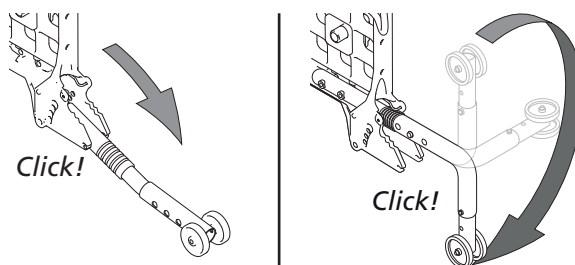

- After any adjustments on your wheelchair, always ensure that you check the function of the anti-tips. If necessary to adjust, please contact your dealer or your Technical Aids Centre.

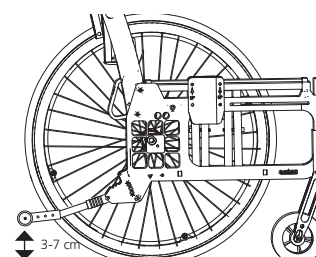

User manual

Legrest

The legrests can be removed/swung to the side if needed. Lockable legrests by pushing the red button (A).


To fasten the lockable legrests press down on the red button (A), put the legrest into place and release the button. The legrest is now locked (B).



Before lifting the wheelchair, check that the legrests are locked.



For lifting a wheelchair without lockable legrests: Swing in the legrests under the seat, or remove them, and lift using the frame (lower or upper part).

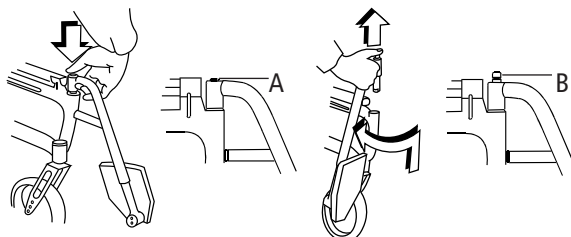

Push handles/bow handle, height adjustable

Loosen the knobs (A). Set desired height. Ensure that the push handles are locked in the correct position, tighten the knobs.




Ensure that the knobs are properly tightened. This is especially important if the chair is to be lifted with the user sitting in it.



Make sure the safety button pops out below the bracket.




The bow handle must be removed before the chair can be folded.

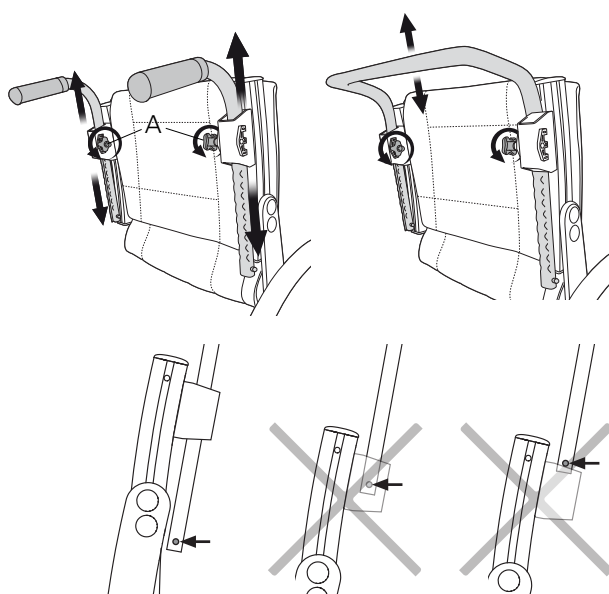


Backrest mod. 2

Loosen the knob (A) and press the red plastic washer. Then as above.

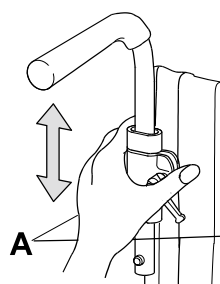


Cross drum brake (service brake)

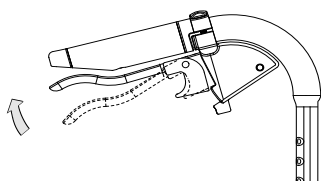

- Brake while in motion by pulling the brake lever upwards.

Cross drum brake (parking brake)

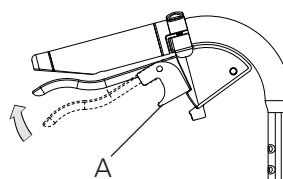

- Activate the parking brake by pulling the brake lever upwards and pressing in button A.
- Release by pressing the lever upwards.

User manual

Settings seat comfort

Seat comfort

Good seating comfort depends on the needs and possibilities available to each individual. The following general guidelines here show what to consider when settings are made.


Select a seat cushion with care. Aside from comfort, it has an impact on stability and thereby freedom of movement. Seat cushions also have different pressure distribution

qualities.

The backrest setting is a combination of angles, height and shape. This is why the angle settings and height for the backrest may need to be adjusted when the backrest cover is being adjusted.


Backrest cover

- Loosen all back straps, but make sure that the Velcro is still stuck together.
- Place the backrest cover so that it covers the upper edge of the back rails and forms a crease between the seat and the backrest allowing the user to properly sit in on the seat.

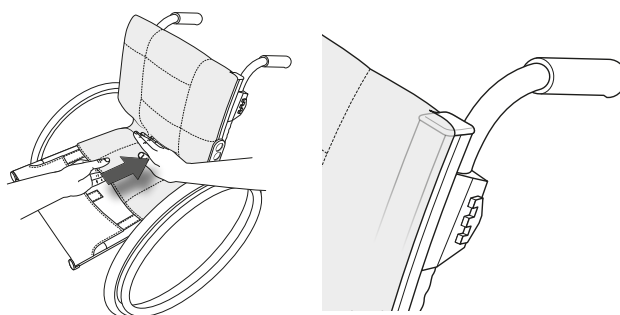

Seat cushion

- Make sure that the correct seat depth is set.
- Position the cushion as far back on the seat so that the rounded corners end up between the back rails.
- Measure a suitable seat cushion length and cut it according to supplied instructions.
- A more contoured seat cushion can be obtained by using a comfort wedge which is placed in the cushion cover's pocket under the seat cushion.

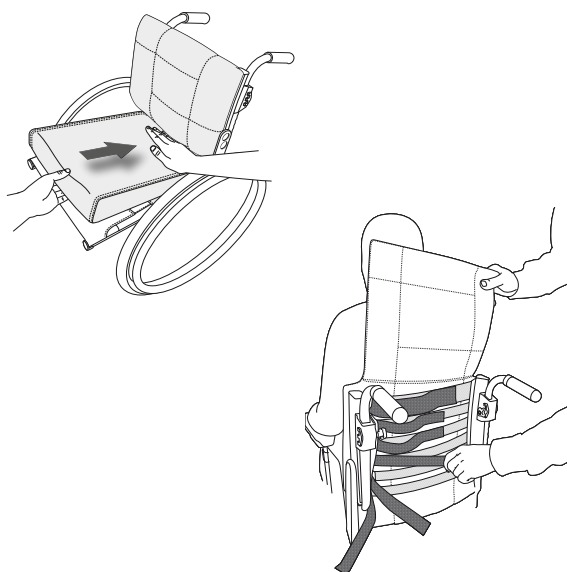

Backrest upholstery

The backrest upholstery is adjusted with the user sitting in the wheelchair.

- Make sure the user is sitting as far back in the seat as possible.
- Support the pelvis by tightening the strap found just below the lumbar region.
- Then adjust the upper strap to provide the user with upper body support and balance.
- The other straps are adjusted to provide space for the user's posterior and follow the back's natural curvature.



Risk of tipping: Always check the setting of the the anti-tips.



Do not overtighten the upper straps as this can prevent the cross-brace from unfolding properly, i.e. the seat-frame tubes do not sit flush in the sideframes.

Backrest angle

The backrest angle may need to be adjusted when adjusting the shape of the backrest upholstery. Contact your dealer or your Technical Aids Centre.

User manual

Settings seat comfort


Footrests

Adjust the height until you are sure that your feet are supported and your thighs are resting on the cushion.

For outdoor use the footrests should be raised 4-5 cm above the ground.




Never stand on the footrests as there is a risk of tipping!

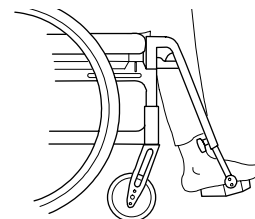

Adjusting the angle




Adjust the footrest angle, so the ankles are at 90°.

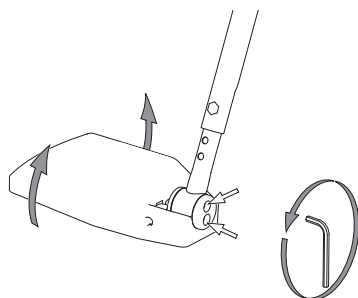

5 mm


Adjusting the height

Loosen the knob and pull out the screw. Set the height. Assemble the screw and knob and tighten firmly.

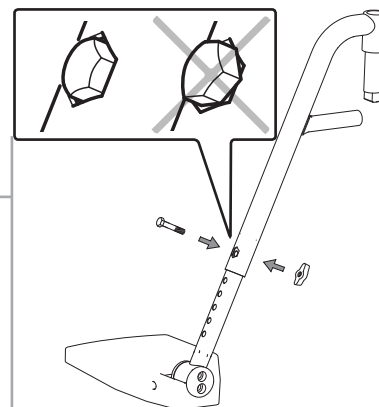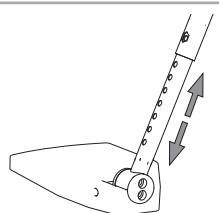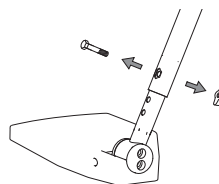


Changing the depth of the foot supports

Adjust the depth of the foot supports by switching the right and left foot support. Do not forget to adjust the angle.

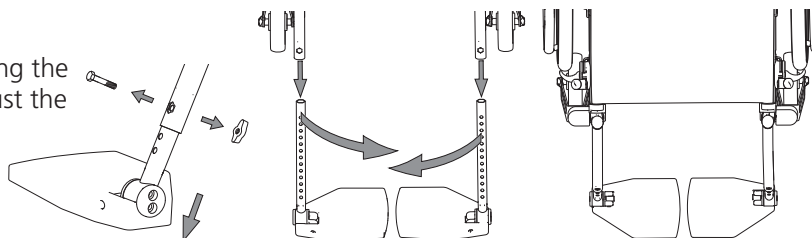


Calf/heel strap

- Adjust the length so that your insteps rest on the footrests.

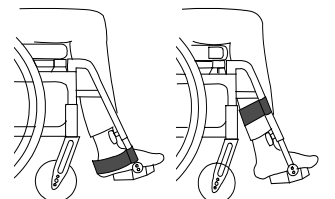

Armrest (adjusting)

- Loosen the screw on the inside of the armrest plate.
- Set the required height and tighten the screw.
- The high position of the armrests supports and relieves pressure on the back better than a lower position.

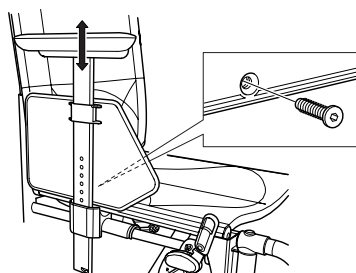

3 mm

User manual


Driving technique, maneuvering



Parking




Never park on a slope with a user in the wheelchair.

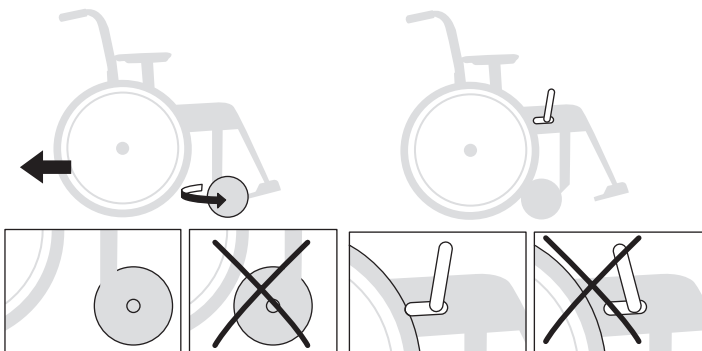



Transferring into/out of the wheelchair




Never stand on the footrests as there is a risk of tipping!

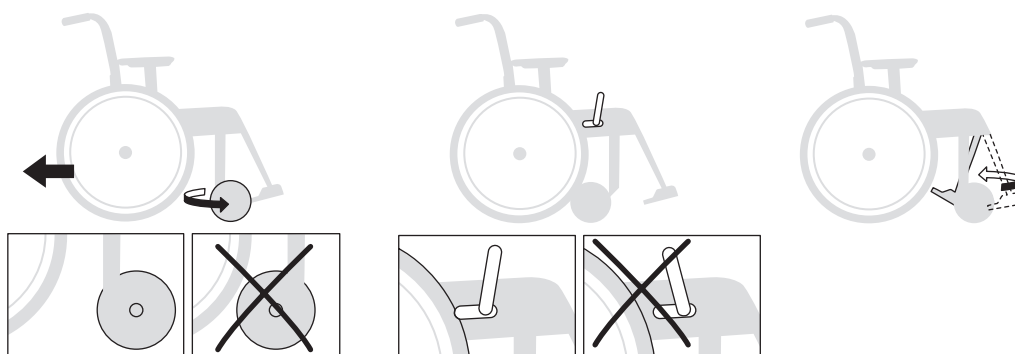



Sideways

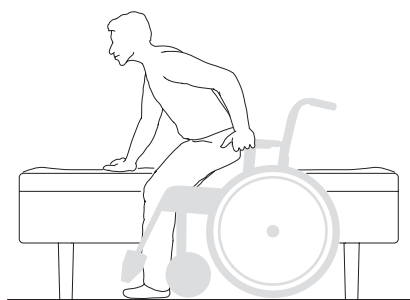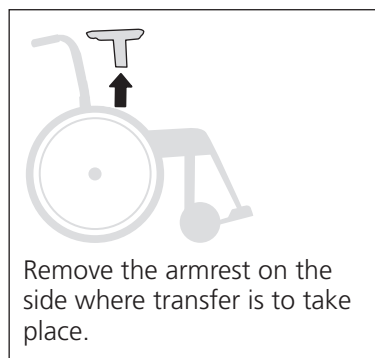


From the front

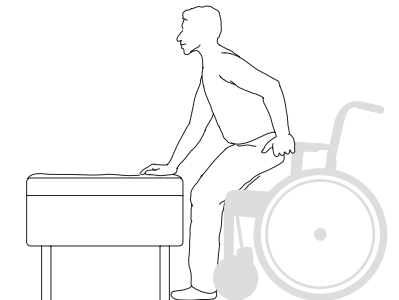

Lifting the wheelchair

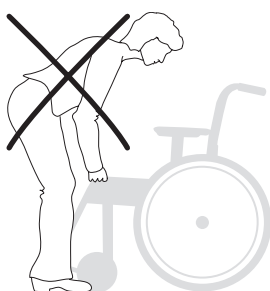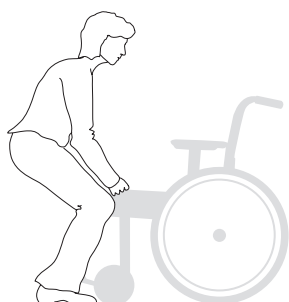

- Ensure that the vertically adjustable push handles are properly tightened.
- Swing non-lockable legrests in under the seat and lift the wheelchair by the front upper part of the frame.

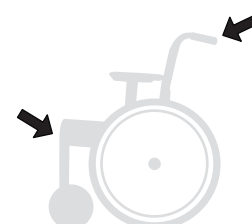

User manual


! The following figures show principles for propelling techniques and how to overcome obstacles like steps and curbs.



User, up forwards

This technique is recommended only for experienced wheelchair users.

– Ensure that the anti-tips are deactivated.

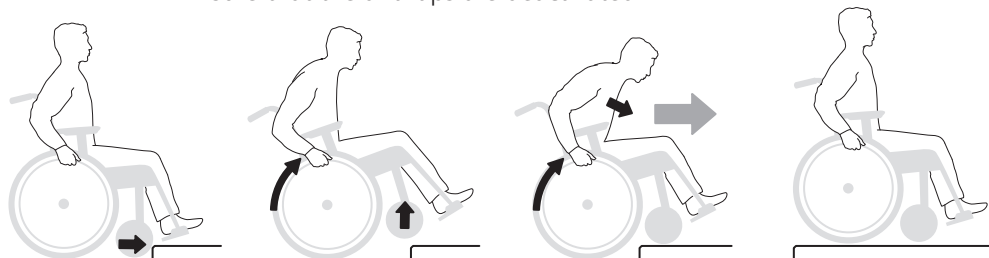


Activate the anti-tips afterwards!



User, up backwards

This technique only works if there is a low kerb/threshold, relative to the installed height of the footrests.

– Ensure that the anti-tips are deactivated.

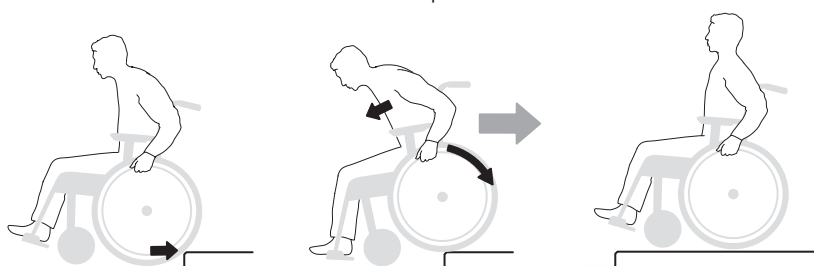


Activate the anti-tips afterwards!



User, down forwards

This technique is recommended only for experienced wheelchair users.

– Ensure that the anti-tips are deactivated.

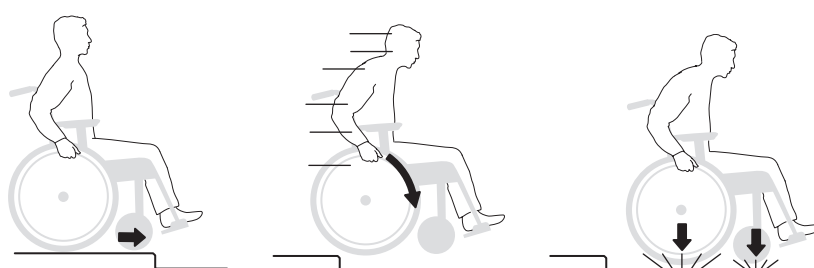


Activate the anti-tips afterwards!





User, down backwards

This technique is recommended only for experienced wheelchair users.

– Ensure that the anti-tips are deactivated.

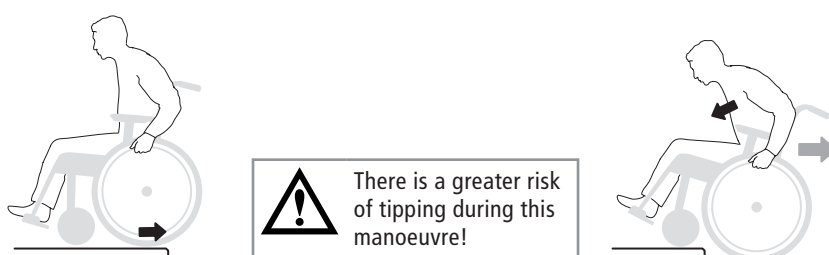

There is a greater risk of tipping during this manoeuvre!

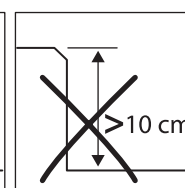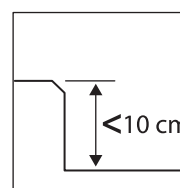


Activate the anti-tips afterwards!

User manual



Care giver, up forwards

– Ensure that the anti-tips are deactivated.

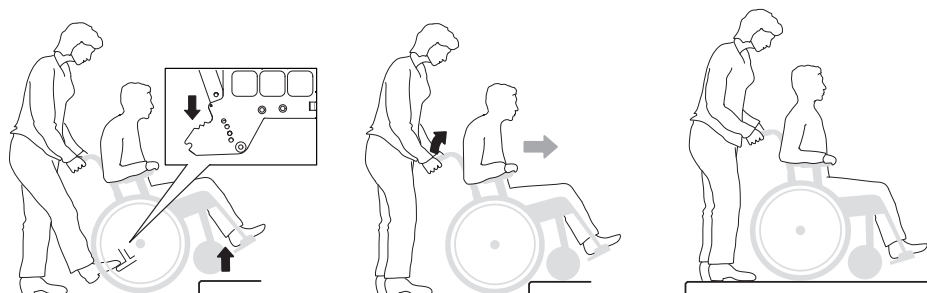


Activate the anti-tips afterwards!



Care giver, up backwards

– Ensure that the anti-tips are deactivated.

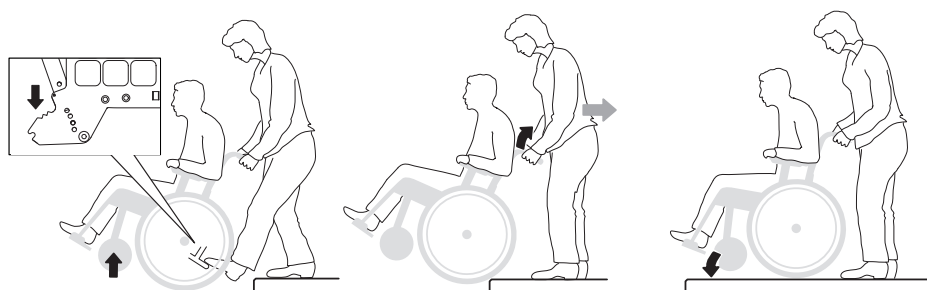


Activate the anti-tips afterwards!



Care giver, down forwards

– Ensure that the anti-tips are deactivated.

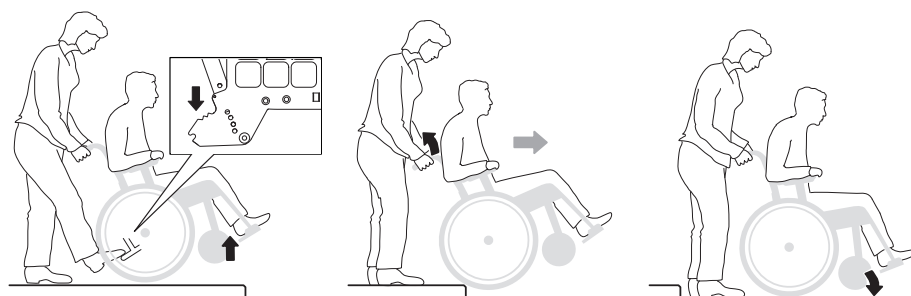


Activate the anti-tips afterwards!



Care giver, down backwards

– Ensure that the anti-tips are deactivated.

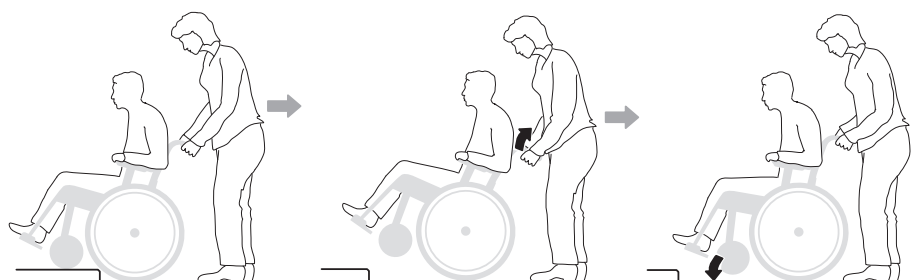

Activate the anti-tips afterwards!




User manual



Stairs, up

– Ensure that the anti-tips are deactivated. Never use an escalator, even if a care giver is available. Ensure that height adjustable push handles are tightened.

We always recommend using two carers for this transfer. One who walks behind and holds on to the push handle and one who walks in front and holds on to the frame (or in the legrests if these are lockable).

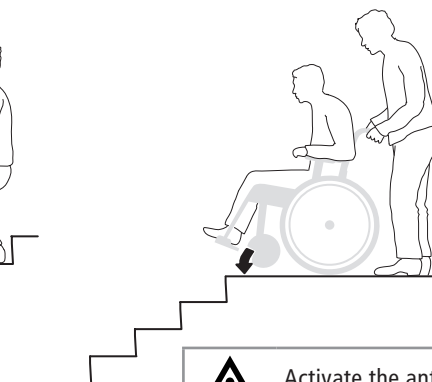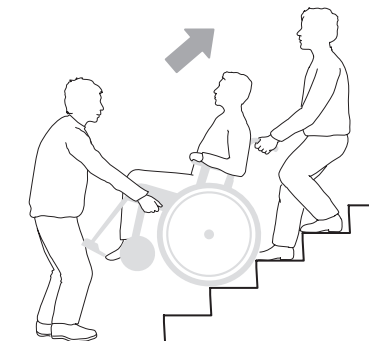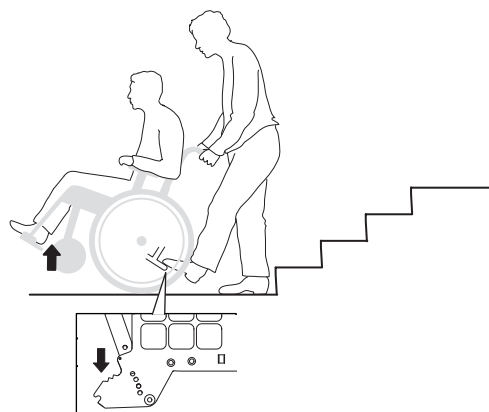




Activate the anti-tips afterwards!



Stairs, down

– Ensure that the anti-tips are deactivated. Never use an escalator, even if a care giver is available. Ensure that height adjustable push handles are tightened.

We always recommend using two carers for this transfer. One who walks behind and holds on to the push handle and one who walks in front and holds on to the frame (or in the legrests if these are lockable).

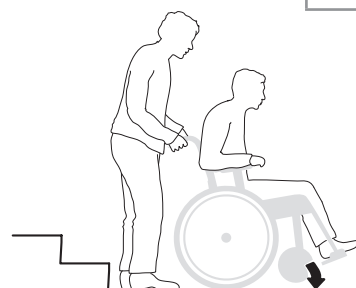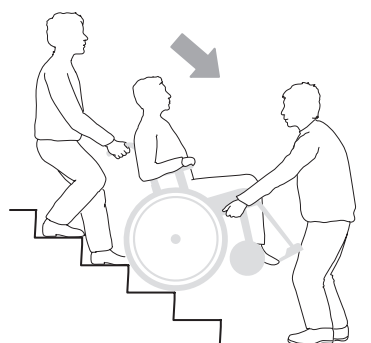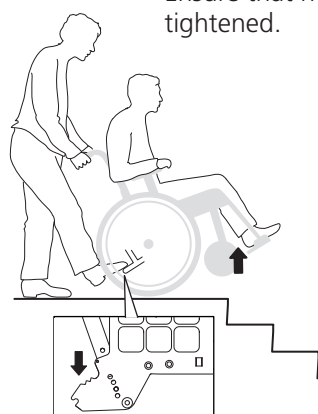

Activate the anti-tips afterwards!




Ascending/descending hills

Control your speed using the handrims, not the brakes!

Avoid turning round in the middle of a hill. Always drive as straight up/down as possible. If uncertain, ask for assistance.


Uphill

Lean forwards to correct your centre of balance.

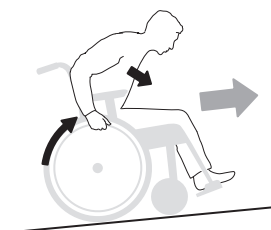

Downhill

Lean backwards to correct your centre of balance.

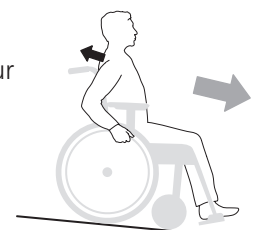

Activate the anti-tips afterwards!

User manual

Maintenance

Rear wheels: Clean quick release axles as required.

Tyre pressure: Check the tyre pressure (once/month).

Castors: Clean castor wheel axles as required.

Chassis: Clean the chassis with non-abrasive detergent, pH value 5-9 or with 70 % disinfectant solution. Rinse and dry.

Upholstery: Wash, see labels on each item.

In the event of problems, contact your dealer or Technical Aids Centre.



If necessary, lubricate moving parts/joints with cycle oil or similar.

Fault-finding chart

The wheelchair is pulling diagonally	<ul style="list-style-type: none"> • Pump up the tyres • Check and adjust the angle of the front fork attachments • Check that the front fork attachments are set at the same height • The user's weight is not evenly distributed in the wheelchair • More strength being used on one side than the other when propelling the chair
The wheelchair feels "heavy" to propel	<ul style="list-style-type: none"> • Pump up the tyres • Rear wheel mountings are incorrectly fitted • Clean the castor axles from hair and dirt • Too much weight over the castors. Adjust the centre of balance
The wheelchair feels "heavy" to turn	<ul style="list-style-type: none"> • Pump up the tyres • Check that the front fork attachments are not too tight • Check and adjust the angle of the front fork attachments • Clean the castor axles from dirt • Too much weight over the castors. Adjust the centre of balance
Brakes not effective	<ul style="list-style-type: none"> • Pump up the tyres • Adjust the distance between brake and tyre
Rear wheels "loose"	<ul style="list-style-type: none"> • Adjust the length of the axle shaft
Rear wheels hard to remove/re-place	<ul style="list-style-type: none"> • Clean and lubricate quick release with cycle oil or similar • Adjust the length of the axle shaft
The castor wheels "wobble"	<ul style="list-style-type: none"> • The front forks are not tight enough • Check and adjust the height and angle of the front fork attachments • Too much weight over the castors. Adjust the centre of balance
The wheelchair is hard to fold/unfold	<ul style="list-style-type: none"> • The upholstery is too tight • Clean and lubricate the cross-brace under the seat
The wheelchair feels "awkward"	<ul style="list-style-type: none"> • Pump up the tyres • Check that screws, nuts and bolts are properly tightened

6. Settings backrest 3A

Cross 5

Cross 5 XL

Adjusting back support angle, mono- bi- and triangular back




1. Loosen the nut.

2. Adjust the backrest angle. Use the position markings to obtain the same backrest angle on the right and left sides respectively.

3. Tighten the nut.



Risk of tipping: Always check the setting of the anti-tips.

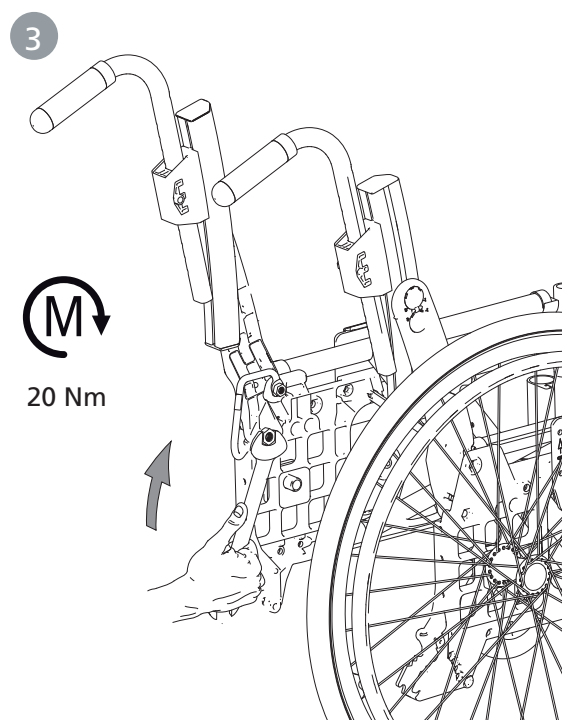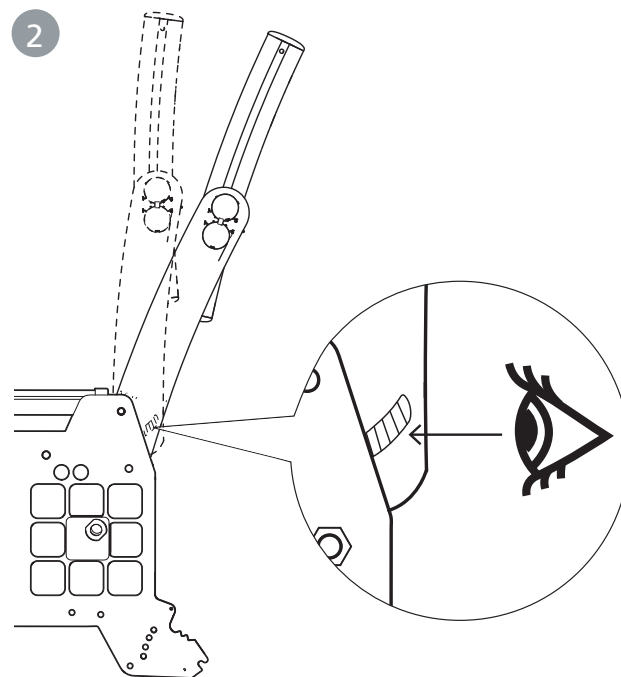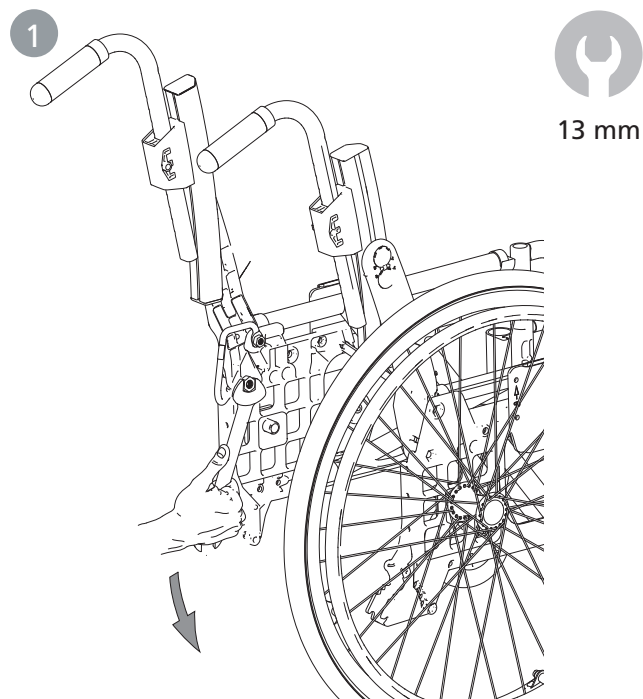

6. Settings backrest 3A

Cross 5

Cross 5 XL


Adjusting the backrest height, monoangular back

1. Remove the protective cover.
2. Loosen the locking screw max. 1 turn.
- 3-4. Adjust the back support height using the graduation and marking on the lower back rod.

5. Tighten the locking screw.
6. Fit the protective cover.



Risk of tipping: Always check the setting of the anti-tips.

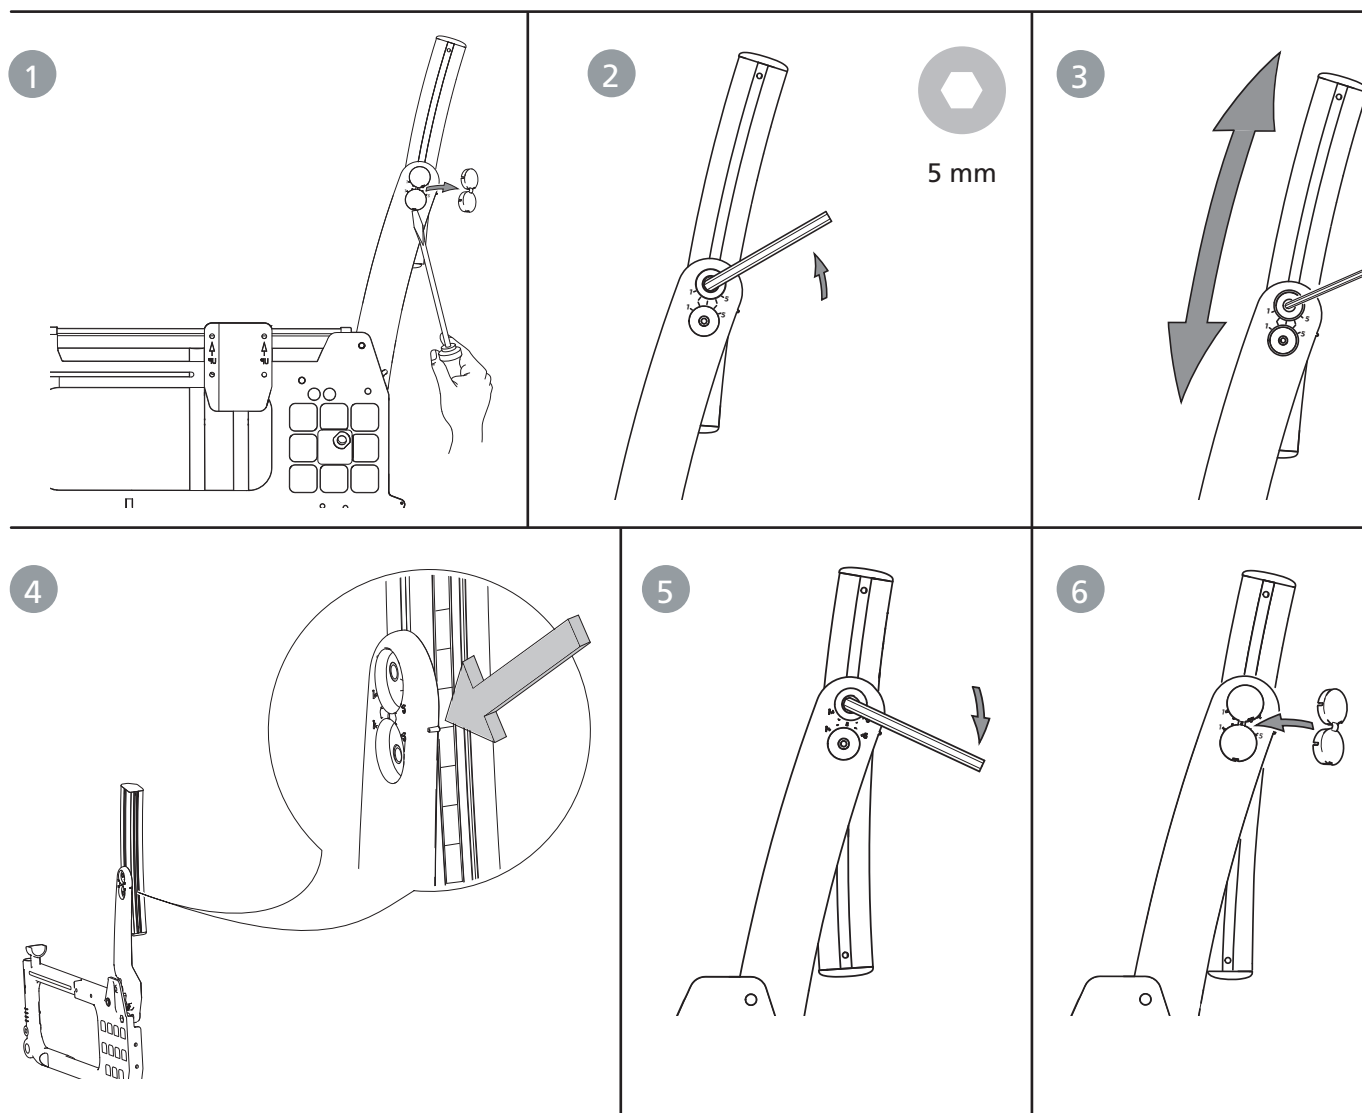

6. Settings backrest 3A

Cross 5

Cross 5 XL

Adjusting the backrest height and lumbar angle, biangular back

1-2. Remove the protective cover and loosen the locking screw (A) max. 1 turn (see also *illustration 1* on page 32).

3. Adjust the back support height using the graduation and the marking on the lower back rod.


4. Move the Allen key to the eccentric shaft's key handle (B).

5-6. Set desired lumbar angle.

7. Tighten the locking screw and fit the protective cover as in *illustration 5-6* on page 32.



Risk of tipping: Always check the setting of the anti-tips.

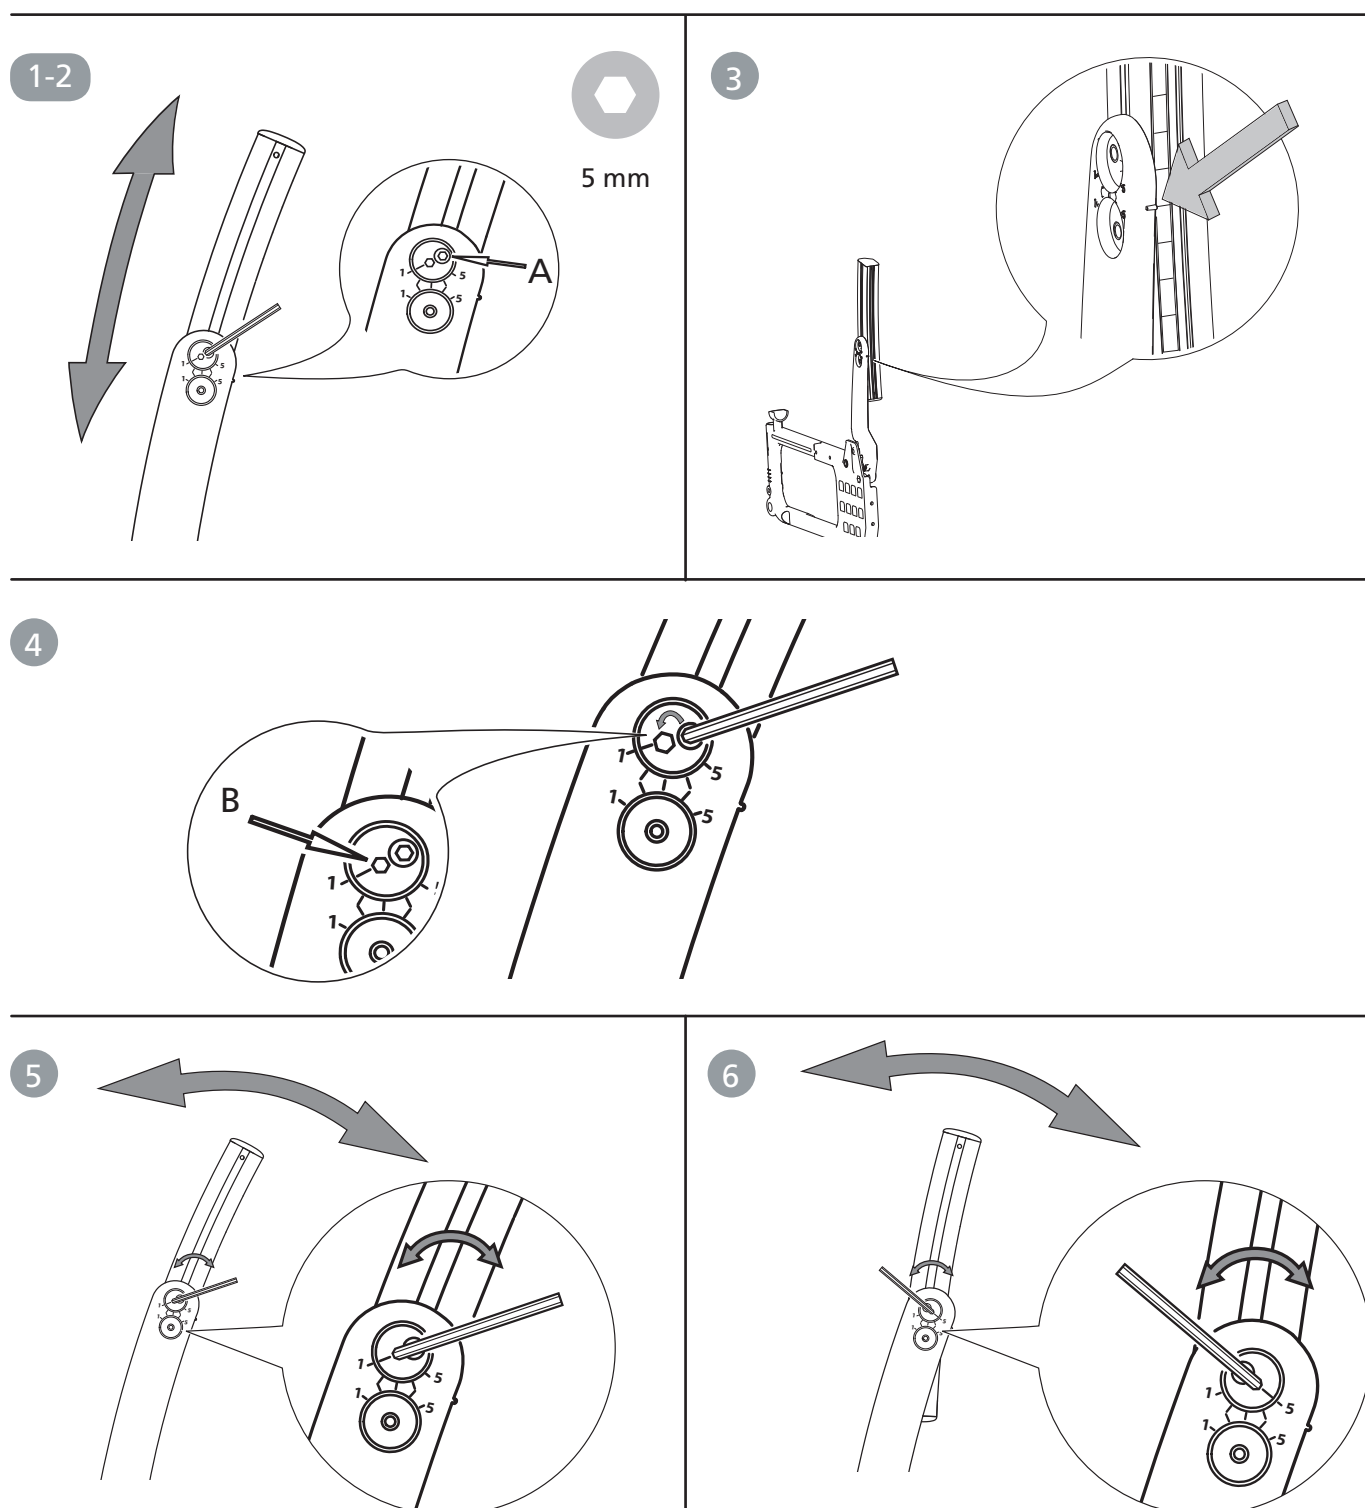

6. Settings backrest 3A

Cross 5

Cross 5 XL

Adjusting the backrest height and lumbar angle, triangular back

1-2. Remove the protective cover and loosen the locking screws (A) max. 1 turn (see also *illustration 1-2 on page 32*).

3. Adjust the back support height using the graduation and the marking on the lower back rod. Tighten the locking screws max. 1/2 turn.

4. Place the Allen key in the selected (upper recommended) eccentric shaft's locking screw and loosen it 1/2 turn. Move the Allen key to the eccentric shaft's key handle and set the required lumbar angle.

5. Tighten the locking screws and fit the protective cover as in *illustration 5-6 on page 32*.




We recommend that you start adjusting the lumbar angle with the upper eccentric shaft. If a larger angle is required, adjust the lower eccentric shaft as well.




Risk of tipping: Always check the setting of the the anti-tips.

1-2


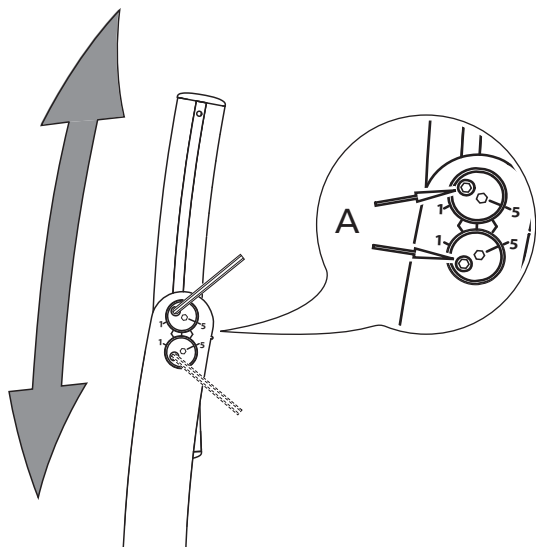


5 mm

3

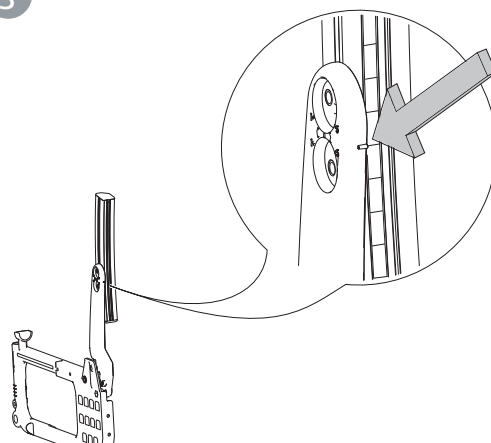

4

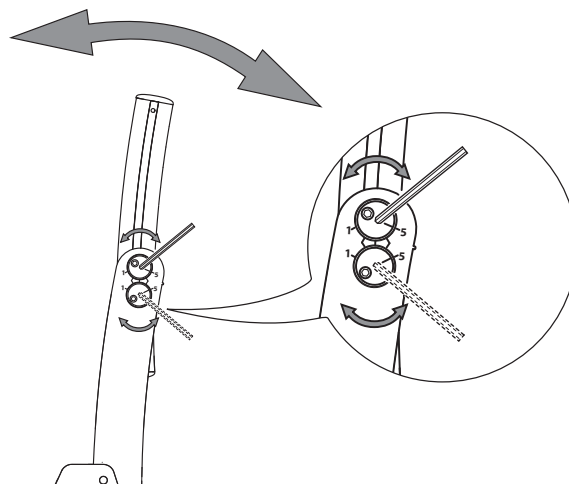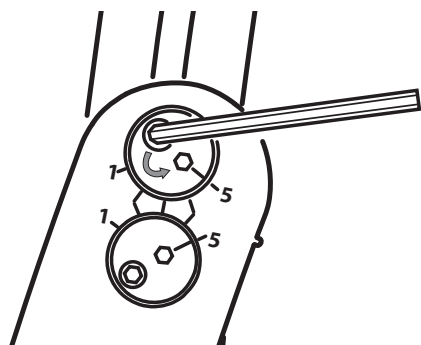

6. Settings backrest 3A

Adjusting seat depth using lumbar angle, triangular back

An extended seat depth is achieved by opening the back support angle (hip) and then the lumbar angle.



1. Adjust the back support angle (see also *illustration 1-3 on page 32*).

2. Adjust the lumbar angle to the required back-rest angle using the eccentric shafts as in *point 4-5 on page 34*.

3. If necessary fit seat extender (accessory)..




Risk of tipping: Always check the setting of the the anti-tips.

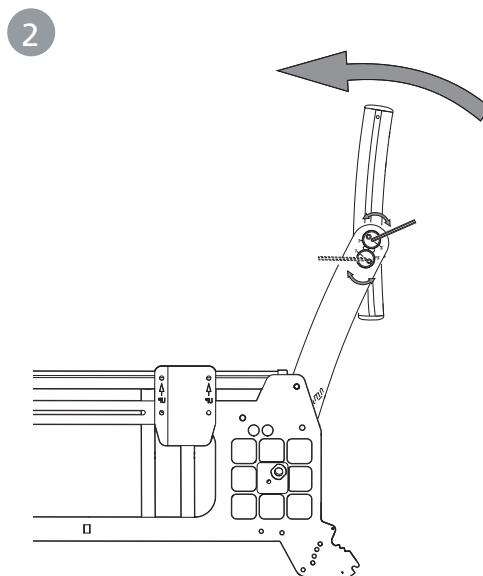
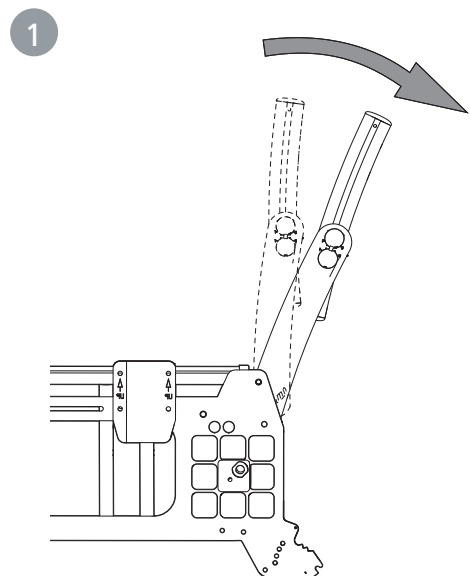


5 mm

Fitting seat extender

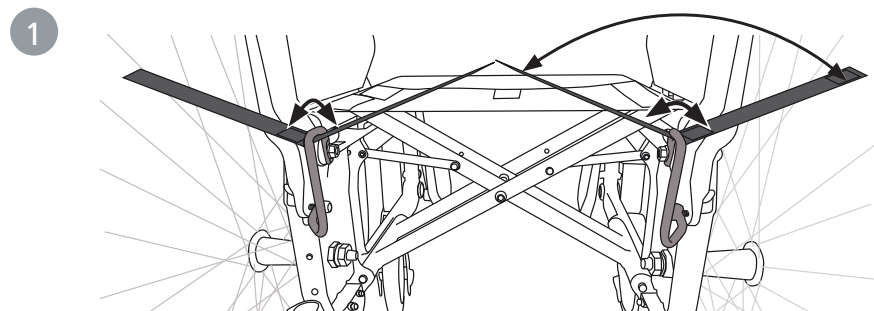

Risk of tipping: Always check the setting of the the anti-tips.

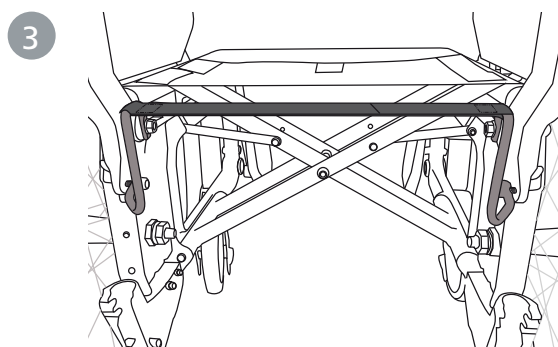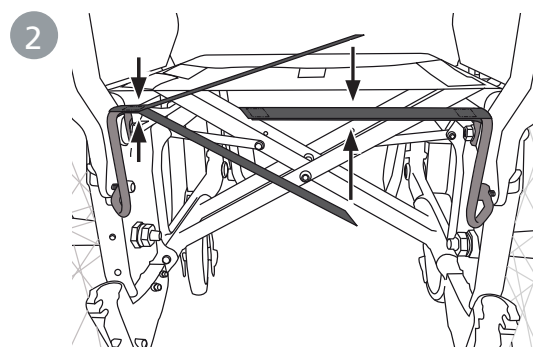


7. Settings backrest mod. 2

Setting backrest height

The backrest height is continuously settable (See "*The chairs possibilities*").

Loosen the screws (A) 2-3 turns to set the height of the backrest. Ensure that both sides are at the same height by checking against the ruler (B) on the back of the back tube. Tighten the screws securely.

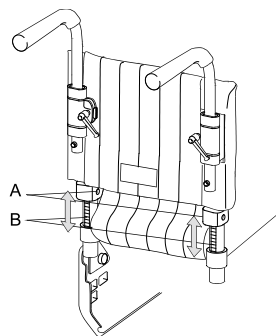

5 mm




Risk of tipping: Always check the setting of the anti-tips.

Adjusting backrest angle

The backrest angle is infinitely variable (See "*The chairs possibilities*"). The angle is adjusted using the nut on the inside of the rear wheel attachments.

- Loosen the nut on one of the back tubes, set the desired angle and tighten the nut firmly again.
- Repeat the procedure on the other side.

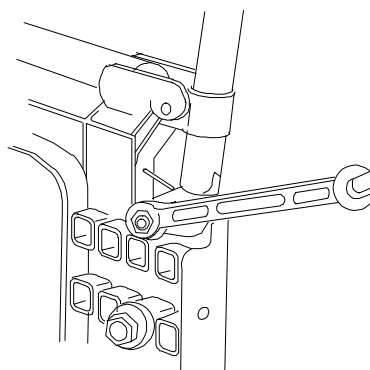

13 mm



Check that the angle is the same on both sides by comparing the distance between the back tube and the armrest plate.




Risk of tipping: Always check the setting of the anti-tips.

Adjusting backrest upholstery

The contour of the backrest upholstery is individually adjustable by using the five Velcro straps and the backrest cover.

- Allow the cover plenty of room between seat and backrest, so that it is possible to "sit in" against the backrest.
- Loosen all the straps and ensure that the user is sitting as far back in the seat as possible.
- Tighten the straps in such a way that they follow the contours of the user's back and give plenty of support to the lumbar region.

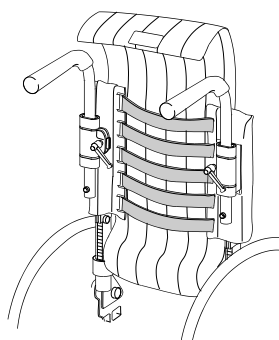

Do not overtighten the upper straps as this can prevent the cross-brace from unfolding properly, i.e. the seat-frame tubes do not sit flush in the sideframes.



Risk of tipping: Always check the setting of the anti-tips.

8. Readjustments


Brake, adjustment

The brakes are infinitely settable.

1. Loosen the screw a couple of turns.
2. Set the brake in correct position.
3. The brake block should be 15-20 mm from the tyre when the brake is not applied.
4. Ensure that the brake is straight in the groove and tighten the nut. Test the brakes.
5. Ensure the nut locks on the inside.




The braking effect is dependent on the air pressure in the tyres. The brakes are parking brakes and should not be applied during use.

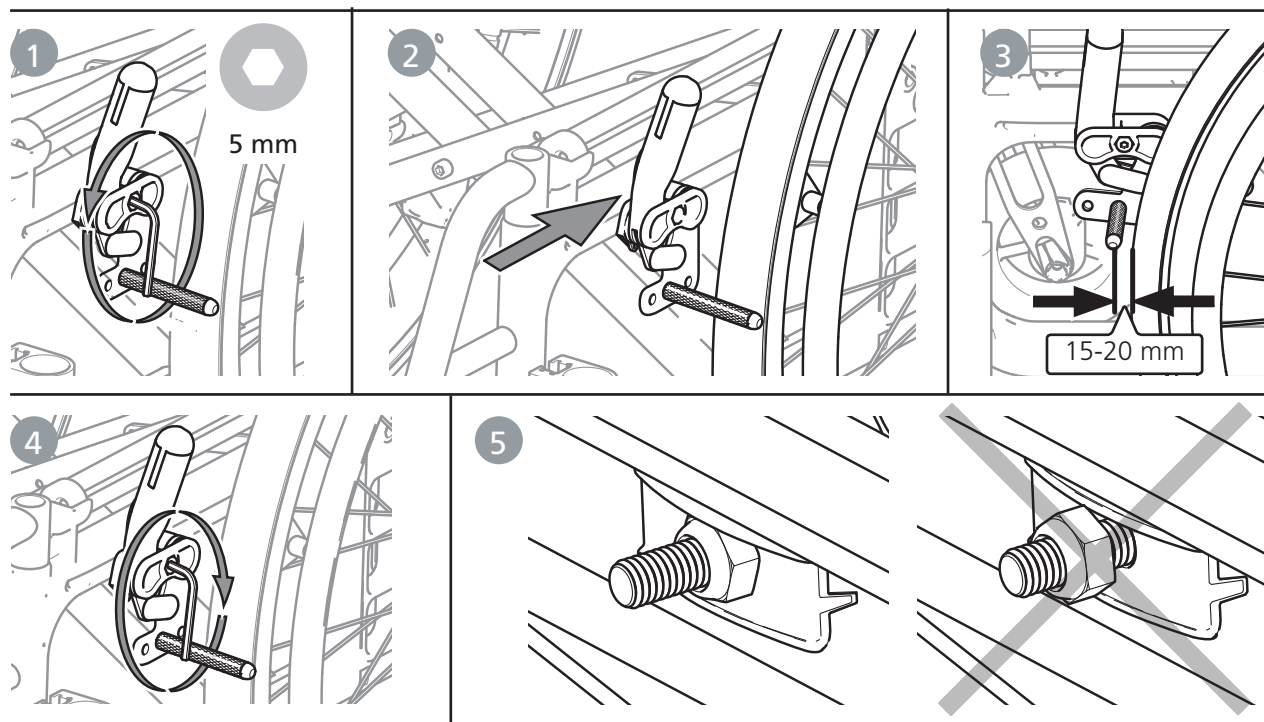


If the rear wheel is positioned in one of the forward settings it is possible for a legrest, when swung to the side, to unlock an applied brake. To avoid this the brake handle should be adjusted so that you attain a "neutral" position. In this way the brake will unlock first when the handle is pushed close to the rear wheel.

1. Loosen the screw on the inside of the brake handle.
2. Remove the oval plate, turn it 180° (the pin on the plate's inside must sit in the upper hole).
3. Tighten it again.

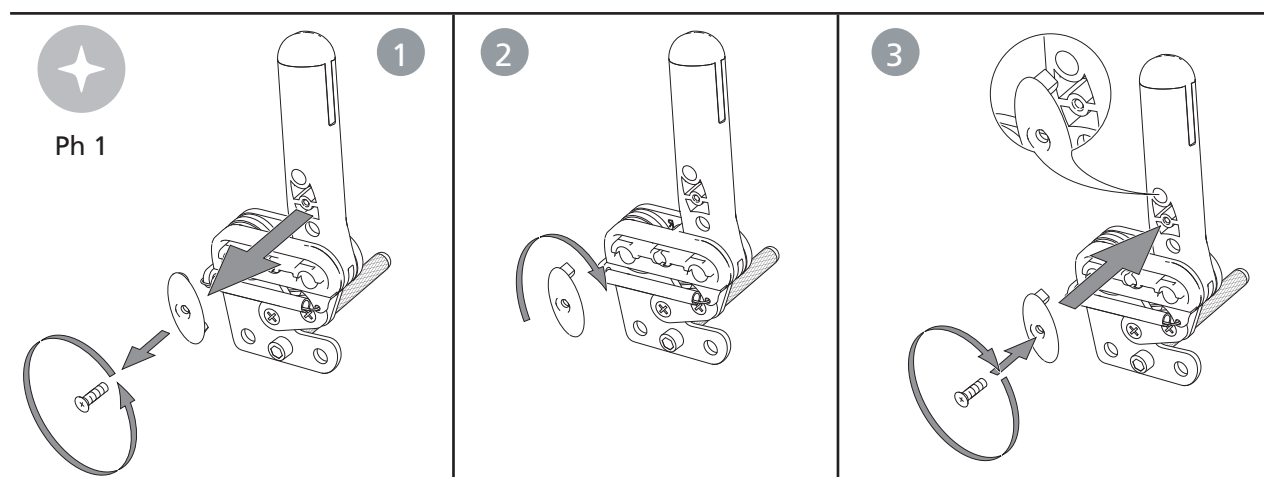

8. Readjustments

Adjusting the brake block

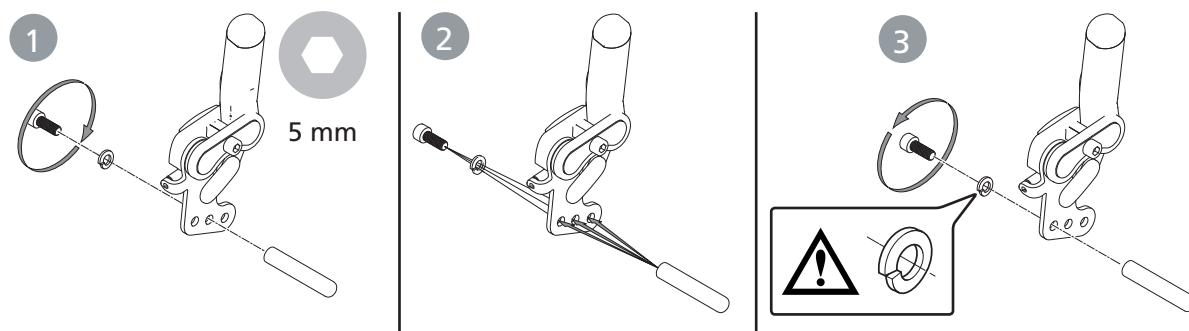


Legrest, infinitely angle adjustable



Never stand on the footrests as you may tip the chair! For lifting a wheelchair, swing in the legrests under the seat, or remove them, and lift using the frame (lower or upper part).



Always have the screw and knob for footrest attached even if not using footrest.

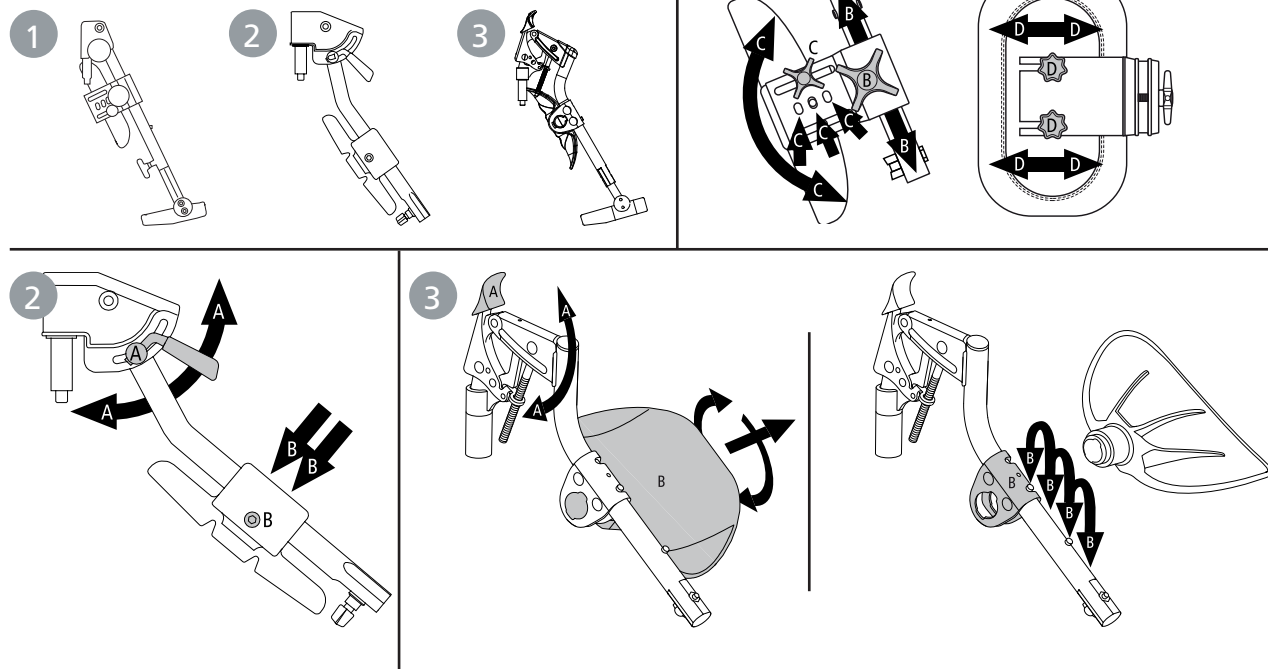

8. Readjustments

Amputee legrest




Never sit on the amputee legrest. When lifting the wheelchair, remove the amputee legrest, swing the other legrest in under the seat (or remove it) and lift using the frame (lower or upper part).



4 mm



6 mm

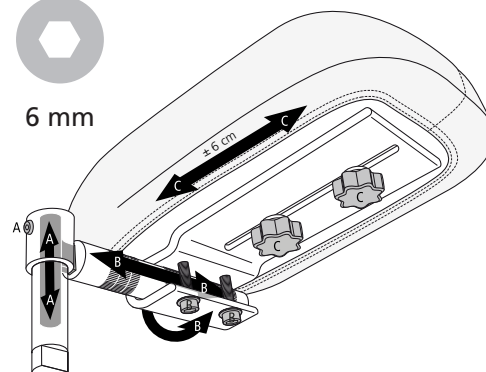


Anti-tips

The anti-tips are settable in height and angle and adjustable in length.






After adjusting seat height, centre of balance, backrest angle or backrest upholstery, the anti-tips function must always be checked.

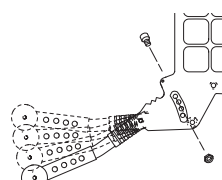


3-7 cm



5 mm

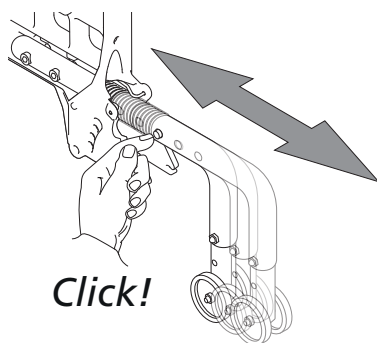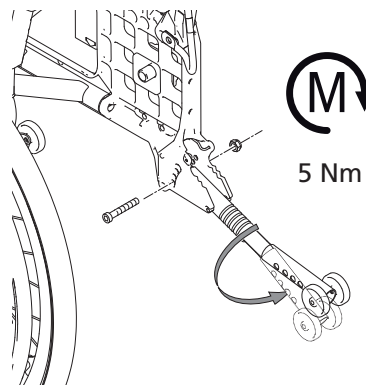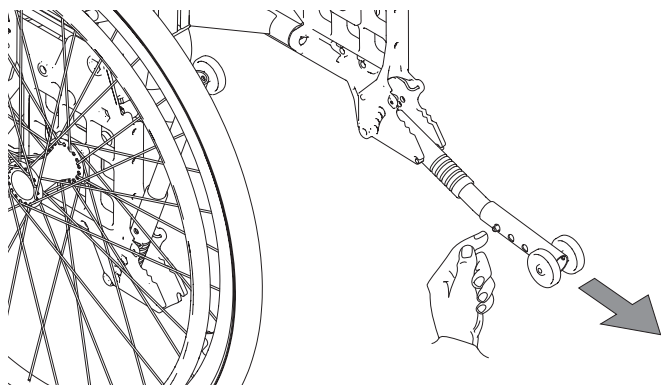

Click!

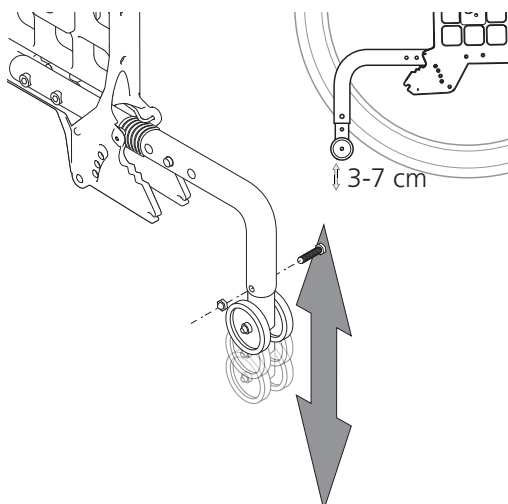

3-7 cm

8. Readjustments

Cross 5


Cross 5 XL

Changing the camber angle

The camber angle can be changed by changing the washers that are mounted between the hub sleeve and the nut. See section "Adjusting rear seat height by changing rear wheel position or rear wheel size".



When assembling, check so that the rear wheel axle is correctly adjusted. The button in the hub must pop out to the original position.

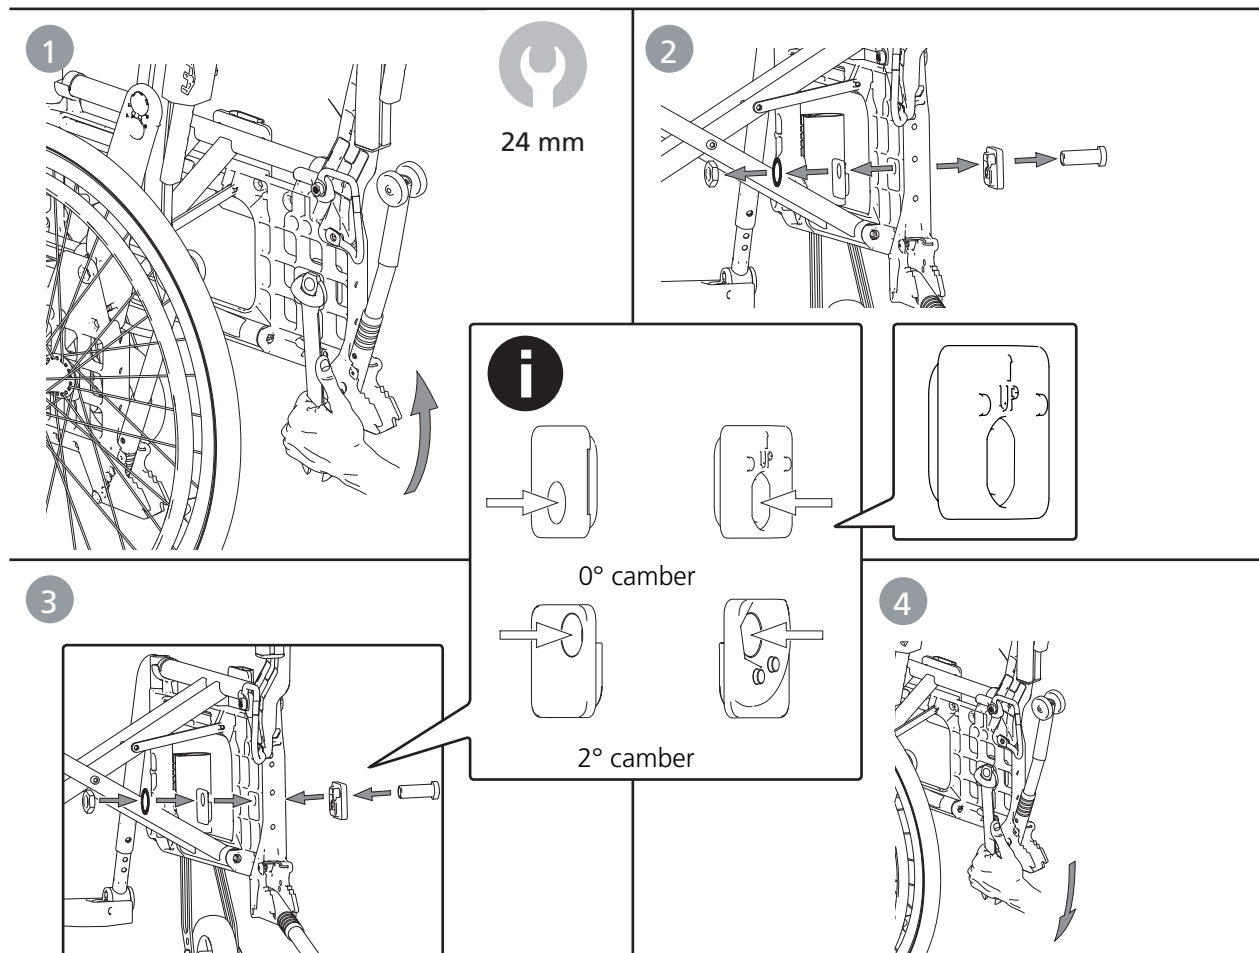

Adjusting the centre of balance

The centre of balance can be adjusted by changing the position of the rear wheels.

- Move the axle shaft/rear wheels forwards/backwards.



The brakes must also be adjusted, see section "Brake, adjustment".



24 mm

When the position of the rear wheels is moved forwards the wheelchair becomes more manoeuvrable, but the tendency to tip backwards increases. See

section "Adjusting rear seat height by changing rear wheel position or rear wheel size".



The centre of balance is also altered when the seat and/or backrest angle is adjusted.



We recommend the use of anti-tips.




Ensure that rear wheels with quick release hubs are mounted securely.


8. Readjustments

Handrims


The way in which the user is able to grip the handrims is influenced by the handrim’s material and its distance from the wheel.



Cellular rubber/ plastic coated handrims increases the friction.
Violent braking can cause mild friction burns (e.g. blisters).




Be aware that when passing through narrow spaces there is a risk of getting your fingers caught. There is also a risk of fingers getting caught in the spokes.



If there is a risk of the user’s fingers getting caught in the spokes we recommend spoke guards.

Adjusting the distance of the handrim

Aluminium, stainless, plastic-coated and cellular rubber handrims for 24", 22" and 20" rear wheel:
The distance between the wheel and the handrim can be adjusted by adding or removing spacers.

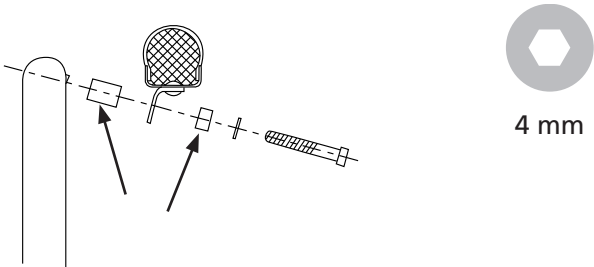

Cross 5	Cross 5 XL
	
	

9. Accessories - adjusting, handling

Armrest, flip-up, height adjustable

The flip-up armrest comes in two varieties, height adjustable and fixed. It is mounted onto the wheelchair's frame and can be flipped upwards/backwards by pressing the red lever (A) inwards.

Mount the armrest according to the assembly instructions supplied.

The armrest height is settable between 22 and 30 cm with 1 cm intervals.


- Push the red lever to one side and loosen the screws that fix the armrest bracket to the frame.
- Slide the armrest up or down to the desired height.
- Tighten the screws again.



Never use the armrests to lift the wheelchair.



These armrests cannot be combined with cane holder or with 24" 22" or 20" rear wheels in position C.

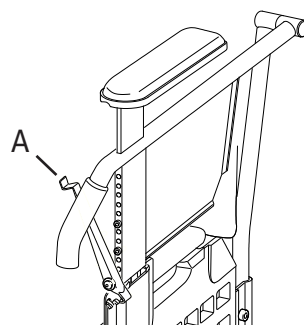

3 mm

Positioning belt

The positioning belt is in two parts, is adjustable in length and has a snap-lock. It is mounted in the holes just in front of the backrest joint, above the wheel mounts.


Assembly instructions are supplied with the belt.



The belt is to be used only for positioning in the wheelchair. It must not be used as a substitute for a car safety belt.



Ensure that the user does not slide forwards in the seat as this can lead to the belt impairing the supply of blood to the hip/waist area.

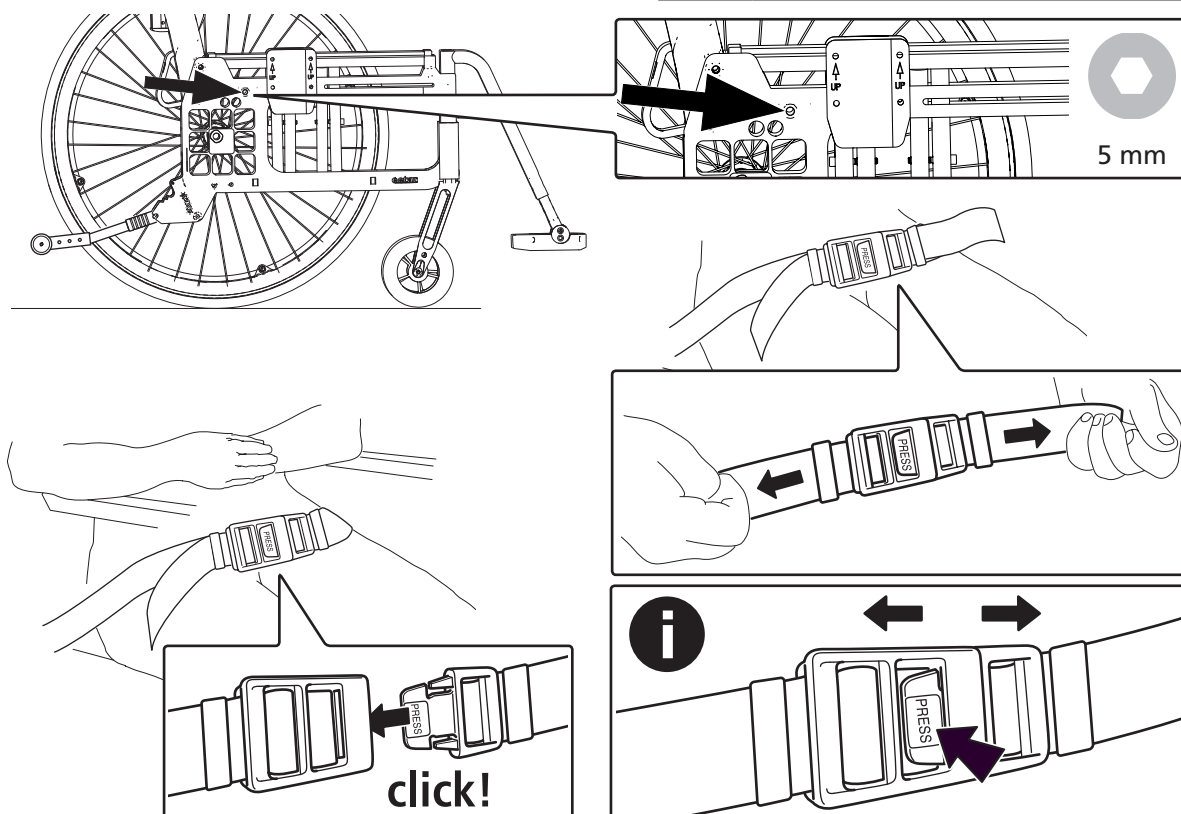

9. Accessories - adjusting, handling

Cross 5

Cross 5 XL

Headrest


The headrest is mounted onto the bow handle (accessory). The headrest is adjustable in height, depth and angle, and is detachable.



Before the headrest is adjusted, ensure that the user has a good, secure sitting posture.



Check the balance of the wheelchair when the user leans against the headrest. We recommend the use of anti-tips.

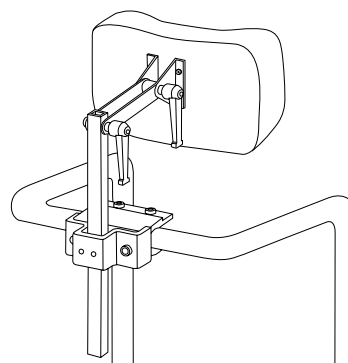

10. Technical data

	Type of chair	Item no Cross 5	Total width	Seat height rear	Seat height front	Seat depth from back- rest tube**	Backrest height*	Transport width	Weight with rear wheel	Max user weight
Cross 5	35 cm short	13123001	56,0 cm	34-53 cm	34-56,5 cm	36-42 cm	32-45 cm	32 cm	15,0 kg	135 kg
	35 cm long	13123002	56,0	34-53	34-56,5	42-48	32-45	32 cm	15,2 kg	135 kg
	37,5 cm short	13123003	58,5	34-53	34-56,5	36-42	32-45	32 cm	15,1 kg	135 kg
	37,5 cm long	13123004	58,5	34-53	34-56,5	42-48	32-45	32 cm	15,3 kg	135 kg
	40 cm short	13123005	61,0	34-53	34-56,5	36-42	32-45	32 cm	15,2 kg	135 kg
	40 cm long	13123006	61,0	34-53	34-56,5	42-48	32-45	32 cm	15,4 kg	135 kg
	42,5 cm short	13123007	63,5	34-53	34-56,5	36-42	32-45	32 cm	15,3 kg	135 kg
	42,5 cm long	13123008	63,5	34-53	34-56,5	42-48	32-45	32 cm	15,5 kg	135 kg
	45 cm short	13123009	66,0	34-53	34-56,5	36-42	32-45	32 cm	15,5 kg	135 kg
	45 cm long	13123010	66,0	34-53	34-56,5	42-48	32-45	32 cm	15,7 kg	135 kg
	47,5 cm short	13123011	68,5	34-53	34-56,5	36-42	32-45	32 cm	15,6 kg	135 kg
	47,5 cm long	13123012	68,5	34-53	34-56,5	42-48	32-45	32 cm	15,8 kg	135 kg
	50 cm short	13123013	71,0	34-53	34-56,5	36-42	32-45	32 cm	15,7 kg	135 kg
	50 cm long	13123014	71,0	34-53	34-56,5	42-48	32-45	32 cm	15,9 kg	135 kg
Cross 5 XL	47,5 cm short	13123111	68,5 cm	34-53 cm	34-56,5 cm	36-42 cm	32-45 cm	32 cm	15,9 kg	160 kg
	47,5 cm long	13123112	68,5	34-53	34-56,5	42-48	32-45	32 cm	16,1 kg	160 kg
	50 cm short	13123113	71,0	34-53	34-56,5	36-42	32-45	32 cm	16,0 kg	160 kg
	50 cm long	13123114	71,0	34-53	34-56,5	42-48	32-45	32 cm	16,2 kg	160 kg
	52,5 cm short	13123115	73,5	34-53	34-56,5	36-42	32-45	32 cm	16,1 kg	160 kg
	52,5 cm long	13123116	73,5	34-53	34-56,5	42-48	32-45	32 cm	16,3 kg	160 kg
	55 cm short	13123117	76,0	34-53	34-56,5	36-42	32-45	32 cm	16,3 kg	160 kg
	55 cm long	13123118	76,0	34-53	34-56,5	42-48	32-45	32 cm	16,5 kg	160 kg
	57,5 cm short	13123119	78,5	34-53	34-56,5	36-42	32-45	32 cm	16,4 kg	160 kg
	57,5 cm long	13123120	78,5	34-53	34-56,5	42-48	32-45	32 cm	16,6 kg	160 kg
	60 cm short	13123121	81,0	34-53	34-56,5	36-42	32-45	32 cm	16,5 kg	160 kg
	60 cm long	13123122	81,0	34-53	34-56,5	42-48	32-45	32 cm	16,7 kg	160 kg

* Applies to Cross backrest 3A. For Cross backrest 3A high applies 38-51 cm.

** With triangular back

Cross 5	Weights and dimensions given are for a chair with 24" rear wheels with quick-release hubs, high pressure tyre, aluminium handrims, legrests, footrests, brakes, armrests, 6 1/2" castors with medium forks. The measurements given may vary by $\pm 2\%$.
Cross 5 XL	Weights and dimensions given are for a chair with 24" rear wheels with quick-release hubs, massive tyres, stainless steel handrims, cross brace back, legrests, footrests, heel strap, brakes, armrest attachment, 6 1/2" castor wheels with medium forks. The measurements given may vary by $\pm 2\%$.

Max lateral tilt	Max tilt up (excl anti-tip)	Max tilt down
>20°	6°	>20°

11. Service and maintenance

Upholstery

The upholstery is made of two-ply polyester. The seat upholstery is fastened lengthways to the seat frame, and can easily be removed from the frame by unscrewing the end caps.

The backrest upholstery is removed by loosening the

screws of the end caps and then pulling the upholstery upwards.

Wash seat and backrest upholstery according to the washing instructions on the product.

Rear wheel/castor wheel, front fork attachment

Tyre/inner tube: Check the tyre pressure (see side of tyre) at least once a month, also check the tread.

Spokes: Loose spokes can lead to wheel wobble. Consult a cycle dealer or your Technical Aids Centre if it is necessary to adjust the spokes

Wheel axles: Clean the wheel axles from hair and dirt as necessary.

Ball bearings: Require no maintenance.

Handrim: If a handrim should be damaged in such a way that it could lead to injury, it should be replaced.

Front fork attachments:
To achieve the best operating conditions, the attachments should be installed at 90°. Check also that the front forks are correctly tightened. See section "*Mounting front fork*".

Brakes

The braking effect is dependent on the air pressure in the tyres. Encrusted dirt can have a negative effect

on the brake mechanism. Check the functioning of the brakes once a month. In the event of adjustments, see point "*Brake, adjustment*".

Washing the frame

It is important to keep the wheelchair clean, both for your own comfort and the longevity of the chair. It is equipped with drainage holes which ensure that it is easy to wash and dry.

Clean the frame with a nonabrasive cleaning agent with a pH level between 5 and 9, or with a 70% disinfectant solution. Rinse and dry.

Touch-up paint

Touch-up paint is available for minor scratches and chips in all the frame colours available for Cross wheelchairs.

Miscellaneous

If there is a fault in your wheelchair you should contact your dealer or Technical Aids Centre. Defective wheelchairs should not be used.

If your chair needs reconditioning or repair, only original parts from Etac or components with equal quality, as specified in Cross diagrams, should be used. Etac will not

be held responsible for damage or injury caused by use of non-original parts.



When necessary lubricate moving parts/joints with bicycle oil or similar.

12. Tests and Guarantees

Crash test:

Etac's wheelchairs are tested in accordance with ISO 7176-19. They are crash tested at the Technical Research Institute of Sweden. The tests were carried out with an UNWIN_WWR/ATF/K/R restraining device and a 907523, Klippan Safety AB 3-point seat belt.

Service life:

The product is tested and fulfils the demands stated in EN 12183. The main product's durability and lifetime is at least five years when used in accordance with intended use, the safety instructions, the reconditioning manual and instructions for use in the user manual. The main product consists of the chassis for seat and back support. Additional parts/accessories are handled in accordance with the manual and reconditioning manual. The actual lifetime can vary, depending on how much and how intensively the product is being used, but a maximum of 10 years. Thereafter the product must be decommissioned.

Methods of surface treatment:

Lacquered surfaces = Polyester powder coating or ED-coating

Non-lacquered aluminium parts = Anodized coating

Non-lacquered steel surfaces = Galvanized

CE marking:

The product has passed all tests and met all criteria set by European standards for specific product groups. Combination agreements exist, see www.etac.com

Guarantee:

5 year guarantee against material and manufacturing defects. For terms and conditions, see www.etac.com

Special adaptations:

comprise everything that falls outside the instructions and settings in this Manual. Wheelchairs specially adapted by customers are not eligible for Etac's CE marking. Etac's guarantee no longer applies. If in the least doubt about the validity of adjustments, please contact Etac for advice.

If wheelchair is combined with another product not manufactured by Etac, neither of the products will retain their CE marking unless combination agreement exists. Please contact Etac for up-to-date information.



To be sorted according to national regulations

Etac Sverige AB
Box 203
334 24 Anderstorp
Sweden

Tel 0371-58 73 00
Fax 0371-58 73 90
info@etac.se
www.etac.se

Etac GmbH
Bahnhofstraße 131,
45770 Marl,
Germany

Tel 02365-98710
Fax 02365-986115
info@etac.de
www.etac.de

Etac AB (export)
Box 203
334 24 Anderstorp
Sweden

Tel 46 371-58 73 30
Fax 46 371-58 73 90
info@etac.se
www.etac.com

Etac Holland BV
Fluorietweg 16a,
1812RR Alkmaar,
Nederland

Tel +31 72 547 04 39
Fax +31 72 547 13 05
info.holland@etac.com
www.etac.com

Etac AS
Pb 249,
1501 Moss,
Norway

Tel 815 69 469
Fax 69 27 09 11
hovedkontor.norge@etac.com
www.etac.no

Etac UK Limited
29 Murrell Green Business Park
London Road, Hook, Hampshire
RG27 9GR, United Kingdom

Tel 01256 767 181
Fax 01256 768 887
info@etacuk.com
www.etac.com

Etac A/S
Egeskovvej 12
8700 Horsens
Denmark

Tel 79 68 58 33
Fax 75 68 58 40
info@etac.dk
www.etac.dk

R82 UK Limited.
Unit D4A, Coombswood Business
Park East
Coombswood Way, Halesowen
West Midlands B62 8BH
United Kingdom

Tel 0121 561 2222
Fax 0121 559 5437
enquiries@etac.uk.r82.com
www.etac.com

Snug Seat, Inc.
12801 E. Independence Boulevard
P.O. Box 1739
Matthews, NC 28106, USA

Tel 800 336 7684
Fax 704 882 0751
Information@snugseat.com
www.etac.com



Etac Supply Center AB
Långgatan 12
SE-334 24 Anderstorp



etac®